
PCG-GRT55E/GRT77E PCG-GRT35F/GRT240G/GRT260G/GRT270G PCG-GRT815E/GRT815M/GRT816M/GRT816S/GRT895MP/GRT896HP/GRT896SP

SERVICE MANUAL

Ver 6-2005F

Revision History

Area	Model	Line up	
Japanese	Japanese	PCG-GRT55E/B PCG-GRT5xE* PCG-GRT5xE/P* PCG-GRT77E/P PCG-GRT7xE* PCG-GRT7xE/P*	△[MA]
	Latin	PCG-GRT35F	△ [MA]
American	US Canadian	PCG-GRT230* PCG-GRT240G PCG-GRT250* PCG-GRT260G PCG-GRT270* PCG-GRT270G	△ [MA] △ [MA] △ [MA]
European	AEP UK	PCG-GRT815E PCG-GRT815M PCG-GRT816M PCG-GRT816S PCG-GRT895MP PCG-GRT896HP PCG-GRT896SP	<u> </u>

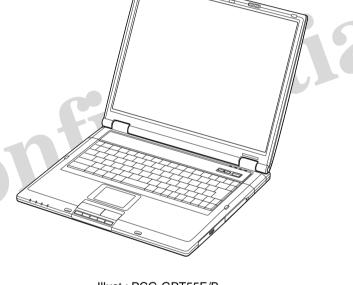











- Design and specifications are subject to change without notice.
- 本機の仕様および外観は、改良のため予告なく変更 することがありますが、ご了承ください。

NOTEBOOK COMPUTER



Information in this document is subject to change without notice.

Sony, VAIO and CLIE are trademarks or registered trademarks of Sony. Microsoft, Windows, Windows Media, Outlook, Bookshelf and other Microsoft products are trademarks or registered trademarks

of Microsoft Corporation in the United States and other countries.

The word Bluetooth and the Bluetooth logo are trademarks of Bluetooth SIG, Inc. AMD, AMD logo, AMD Duron and combinations thereof. 3DNow!, are trademarks of Advanced Micro Devices, Inc. Intel Inside logo, Pentium and Celeron are trademarks or registered trademarks of Intel Corporation. Transmeta, the Transmeta logo, Crusoe Processor, the Crusoe logo and combinations thereof are trademarks of Transmeta Corporation in the USA and other countries. Graffiti, HotSync, PalmModem, and Palm OS are resistered trademarks, and the Hotsync logo and Palm are trademarks of Palm, Inc. or its subsidiaries. (M) and Motrola are trademarks of Motrora, Inc. Other Motrola products and services with (R) mark like Dragomball are the trademarks of Motrola, Inc.

All other names of systems, products and services in this manual are trademarks or registered trademarks of their respective owners.

In this manual, the (TM) or (R) mark are not specified.

Caution Markings for Lithium/Ion Battery - The following or similar texts shall be provided on battery pack of equipment or in both the operating and the service instructions.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

CAUTION: The battery pack used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

Dispose of used battery promptly. Keep away from children.

CAUTION: Changing the back up battery.

- Overcharging, short circuiting, reverse charging, multilation or incineration of the cells must be avoided to prevent one or more of the following occurrences; release of toxic materials, release of hydrogen and/or oxygen gas, rise in surface temperature.
- If a cell has leaked or vented, it should be replaced immediately while avoiding to touch it without any protection.

Service and Inspection Precautions

1. Obey precautionary markings and instructions

Labels and stamps on the cabinet, chassis, and components identify areas requiring special precautions. Be sure to observe these precautions, as well as all precautions listed in the operating manual and other associated documents.

2. Use designated parts only

The set's components possess important safety characteristics, such as noncombustibility and the ability to tolerate large voltages. Be sure that replacement parts possess the same safety characteristics as the originals. Also remember that the \triangle mark, which appears in circuit diagrams and parts lists, denotes components that have particularly important safety functions; be extra sure to use only the designated components.

3. Always follow the original design when mounting parts and routing wires

The original layout includes various safety features, such as inclusion of insulating materials (tubes and tape) and the mounting of parts above the printer board. In addition, internal wiring has been routed and clamped so as to keep it away from hot or high-voltage parts. When mounting parts or routing wires, therefore, be sure to duplicate the original layout.

4. Inspect after completing service

After servicing, inspect to make sure that all

screws, components, and wiring have been returned to their original condition. Also check the area around the repair location to ensure that repair work has caused no damage, and confirm safety.

5. When replacing chip components...

Never reuse components. Also remember that the negative side of tantalum capacitors is easily damaged by heat.

6. When handling flexible print boards...

- The temperature of the soldering-iron tip should be about 270C.
- Do not apply the tip more than three times to the same pattern.
- Handle patterns with care; never apply force.

Caution: Remember that hard disk drives are easily damaged by vibration. Always handle with care.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFÉS PAR UNE MARQUE A SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈSES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPÉMENTS PUBLIÉS PAR SONY.

TABLE OF CONTENTS

Section

<u>Section</u>	<u>Title</u>	<u>Page</u>
CHAPTER 1.	SPECIFICATIONS	1-1 (to 1-1)
CHAPTER 2.	BLOCK DIAGRAM	2-1 (to 2-1)
CHAPTER 3.	FRAME HARNESS DIAG	RAM 3-1 (to 3-1)
CHAPTER 4.	EXPLODED VIEWS AND PARTS LIST	
Optical Drive D-1		4-2
P-2. Palmrest (Bottom B-1.Bottom (10 B-2.Bottom (14 Main Board	16-inch Model)	4-4 4-5 4-6
Hood Keyboard		
Other Parts O-1		
LCD		
L-2. 16-inch U – Made by L-3. 15-inch X	XGA – Made by SH – XGA, SXGA (Clear Black LCD) HI – GA (Clear Black) – Made by HI XGA, XGA (Normal, High Brigh	4-11 4-12
	/ SH –	
-	GA – Made by HI –	

Accessory	
A-1	4-15
DIP Switch	4-16
	(to 4-16
CHAPTER 5. OTHERS	
5-1. The Barcode Label	5-1
5-2. Replacing the CPU	5-2
1. Removing the CPU	5-2
2. Installing the CPU	5-2
5-3. CTO Information	5-3
1. PCG-GRT7xE	5-3
2 PCG_GRT5vF	5_/

 3. PCG-GRT270
 5-5

 4. PCG-GRT250
 5-6

 5. PCG-GRT230
 5-7

Title

History of the changes is shown as the "Revision History" at the end of this data.

変更履歴は、"Revision History"として、 本データ末に記載してあります。

Confidential

<u>Page</u>

(to 5-7)


CHAPTER 1. SPECIFICATIONS

	,	J		A	М					EU			
	PCG-GRT55E/B	PCG-GRT77E/P	PCG-GRT270G	PCG-GRT260G	PCG-GRT240G	PCG-GRT35F	PCG-GRT896HP	PCG-GRT816M	PCG-GRT895MP	PCG-GRT815E	PCG-GRT815M	PCG-GRT896SP	PCG-GRT816S
CPU	M-Cel 2.20GHz	P4 2.66GHz	P4 2.80GHz	P4 2.80GHz	P4 2.66GHz	P4 2.80GHz	P4 2.80GHz	P4 2.80GHz	P4 2.80GHz	P4 2.80GHz	P4 2.80GHz	P4 2.80GHz	P4 2.80GHz
LCD	15XGA (Clear Black)	16.1SXGA+ (Clear Black)	16.1UXGA (Clear Black)	16.1SXGA+ (Clear Black)	15XGA Clear Black	15XGA (Clear Black)	16.0SXGA	16.1SXGA+ (Clear Black)	15XGA	15XGA (High Brightness)	15XGA (High Brightness)	16.1UXGA (Clear Black)	16.1SXGA+ (Clear Black)
HDD	60GB	80GB	80GB	80GB	60GB	80GB	60GB	60GB	60GB	60GB	80GB	80GB	80GB
Graphic	Ge Force4 420Go(32MB)	Ge Force4 420Go(32MB)	GeForce FX Go5600(64MB)	GeForce FX Go5600(64MB)	Ge Force4 420Go(32MB)	Ge Force4 420Go(32MB)	GeForce FX Go5600(64MB)	GeForce FX Go5600(64MB)	Ge Force4 420Go(32MB)	GeForce FX Go5600(64MB)	GeForce FX Go5600(64MB)	GeForce FX Go5600(64MB)	GeForce FX Go5600(64MB)
DDR MEMORY	256MB X 1	256MB X 2	512MB X 1	256MB X 2	256MB X 2	256MB X 2	256MB X 2	256MB X 2	256MB X 2	256MB X 2	256MB X 2	512MB X 2	256MB X 2
QUANTITY [STANDARD/MAX]	256MB / 1024MB	512MB / 1024MB	512MB / 1024MB	512MB / 1024MB	512MB / 1024MB	512MB / 1024MB	512MB / 1024MB	512MB / 1024MB	512MB / 1024MB	512MB / 1024MB	512MB / 1024MB	1024MB / 1024MB	512MB / 1024ME
OPT-DRIVE	DVD+-RW	DVD+-RW	DVD+-RW	DVD+-RW	DVD+-RW	DVD+-RW	DVD+-RW	CD-RW/ DVD-ROM	CD-RW/ DVD-ROM	DVD+-RW	DVD+-RW	DVD+-RW	DVD+-RW
TV tuner	0	0	0	0	0	Х	х	Х	х	х	х	Х	Х
int. Wireless LAN	Х	х	0	0	0	0	0	Х	0	х	х	0	х
AC adaptor	PCGA-AC19V6	PCGA-AC19V6	PCGA-AC19V7	PCGA-AC19V7	PCGA-AC19V7	PCGA-AC19V7	PCGA-AC19V7	PCGA-AC19V7	PCGA-AC19V7	PCGA-AC19V7	PCGA-AC19V7	PCGA-AC19V7	PCGA-AC19V7
Battery	PCGA-BP2NX	PCGA-BP2NX	PCGA-BP2NX	PCGA-BP2NX	PCGA-BP2NX	PCGA-BP2NX	PCGA-BP2NX	PCGA-BP2NX	PCGA-BP2NX	PCGA-BP2NX	PCGA-BP2NX	PCGA-BP2NX	PCGA-BP2NX
os	WinXP Home	WinXP Pro	WinXP Home	WinXP Home	WinXP Home	WinXP Home	WinXP Pro	WinXP Home	WinXP Pro	WinXP Home	WinXP Home	WinXP Pro	WinXP Home
		<u></u> [MA]	<u> </u>	<u> </u>	<u> </u>	<u> </u>						<u> </u>	<u> </u>


[•] The trademarks or registered trademarks of above table, refer to page 2.

[●]本表中の商標・登録商標については、2ページをご参照ください。

CHAPTER 2. BLOCK DIAGRAM

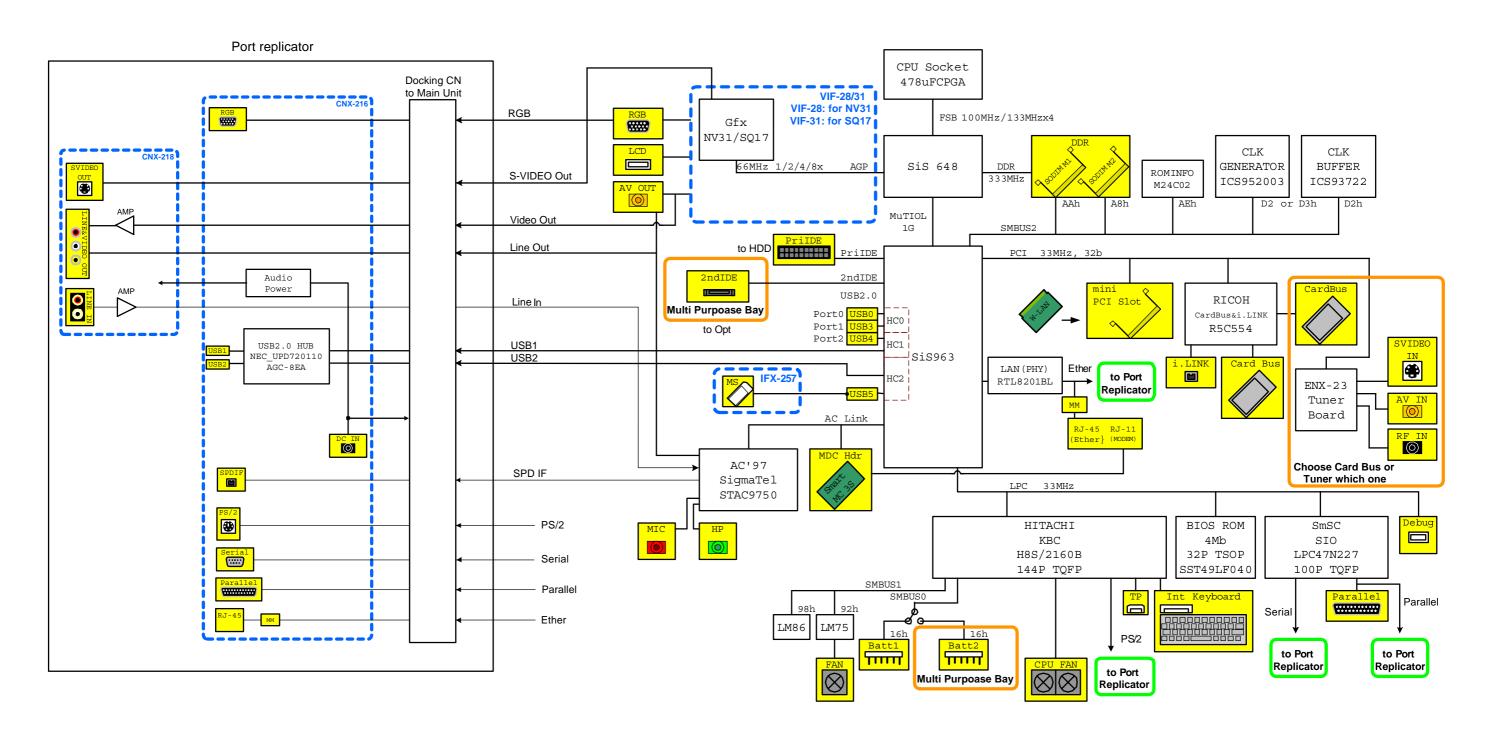

CHAPTER 3. FRAME HARNESS DIAGRAM

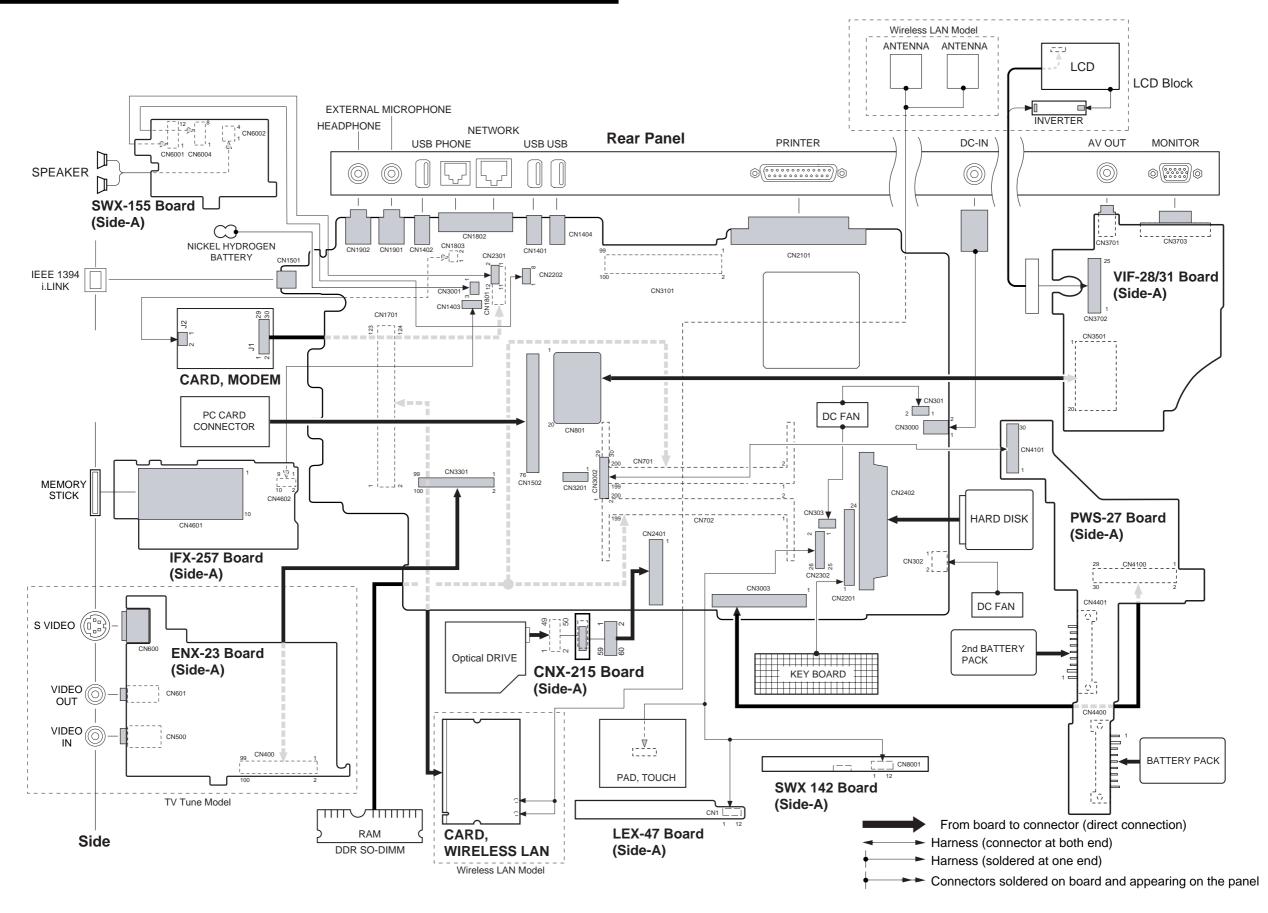

CHAPTER 4.

EXPLODED VIEWS AND PARTS LIST

• The parts list is compiled by blocks of a palmrest and bottom etc. The sections of the parts list are different depending on the model. Please refer to list of contents shown in the below.

◆分解図と部品表は、パームレスト、ボトムなどのブロックごと に分かれています。機種によって部品表のセクションが異なり ますので、詳細は右下の一覧表を参照してください。

Section Page
Optical Drive
D-14-2
Palmrest
P-1 (16-inch Model) 4-3
P-2 (14-inch, 15-inch Model) 4-4
Bottom L & [COR]
B-1 (16-inch Model)
B-2 (14-inch, 15-inch Model)
Main Board └─ ⚠ [COR]
M-14-7
Hood Keyboard
HK-14-8
Other Parts
0-14-9
LCD
L-1 16-inch SXGA – Made by SH – 4-10
L-2 16-inch UXGA, SXGA (Clear Black)
– Made by HI – 4-11
L-3 15-inch XGA (Clear Black) – Made by HI – 4-12
L-4 15-inch SXGA, XGA (Normal, High Brightness)
– Made by SH – 4-13
L-5 14-inch XGA – Made by HI – 4-14
Accessory
A-14-15
DIP Switch 4-16

【使用上の注意】

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- When two or more parts are shown, use the part described first as the main part.
- The parts marked "\$" are the High Value Modules (HVM).
- The parts marked "#" are the parts on which barcode label is attached.
- For the barcode label, refer to CHAPTER 5.

NOTE:


- The parts marked " & " are the "Customer Replacable Parts (CRP)" that can be replaced by Field Customer Support.
- Especially the parts with the <&> mark require the special attention to use them. Here fore, check first whether the desired part is one of the targetted parts of the Customer Replaceable Parts(CRP), or the non-targetted parts by referring to the exploded view.
- · Regarding the boards of this model, the discrete parts on the boards cannot be replaced. However, Some connectors can be replaced.

The components identified by mark ${\ensuremath{\mathbb \Delta}}$ or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Ne les remplacer que par une pièce portant le numéro spécifié.

- •*印の部品は常備在庫しておりません。
- 図面番号のない部品は供給しません。
- ●併記部品の場合,上部記載部品をメイン部品として使用してく
- 部品名称の前に\$ 印のついた部品は、High Value Module (HVM)
- 商品名称の前に#印のついた部品は、バーコードラベル貼付部
- バーコードラベルについてはCHAPTER 5を参照してください。
- 部品名称の前に&印のついた部品は、お客様窓口などでも交換 可能な Customer Replacable Parts (CRP)です。
- 特に<&>印のついた部品は、使い分けが必要な部品ですので、 分解図で Customer Replacable Parts 対象部品か,対象外部品か を必ず御確認ください。
- 本モデルの基板については、基板上の各部品の修理は行うこと ができません。ただし、一部のコネクタについては、修理可能

△印の部品, または△印付きの点線で囲まれた部品 は、安全性を維持するために重要な部品です。 従っ て交換時は、必ず指定の部品を使用してください。

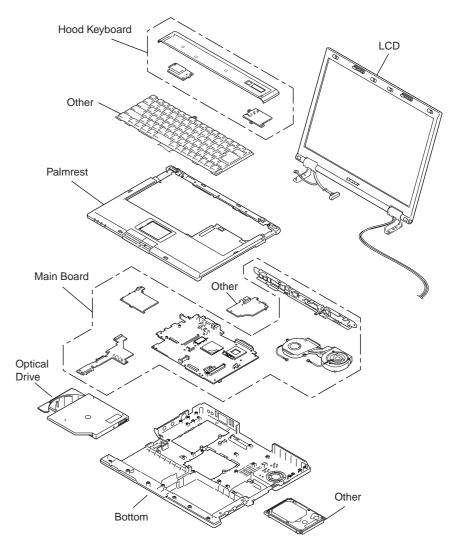


	I	Optical Drive	Palmrest	Bottom	Main Board	Hood Keyboard	Other	LCD	Accessory	7
	GRT77E/P	D-1	P-1	B-1	M-1	HK-1	0-1	L-2	A-1	│
Ι.	GRT55E/B	D-1	P-2	B-2	M-1	HK-1	0-1	L-3	A-1	
J	J-CTO (16)	D-1	P-1	B-1	M-1	HK-1	0-1	L-2	A-1	
	J-CTO (15)	D-1	P-2	B-2	M-1	HK-1	0-1	L-3,4	A-1	
	U-CTO (16)	D-1	P-1	B-1	M-1	HK-1	0-1	L-2	A-1	
	U-CTO (15)	D-1	P-2	B-2	M-1	HK-1	0-1	L-3,4	A-1	
	U-CTO (14)	D-1	P-2	B-2	M-1	HK-1	0-1	L-5	A-1	
AM	GRT270G	D-1	P-1	B-1	M-1	HK-1	0-1	L-2	A-1	<u> </u>
	GRT260G	D-1	P-1	B-1	M-1	HK-1	0-1	L-2	A-1	<u> </u>
	GRT240G	D-1	P-2	B-2	M-1	HK-1	0-1	L-3	A-1	<u> </u>
	GRT35F	D-1	P-2	B-2	M-1	HK-1	0-1	L-3	A-1	
	GRT896HP	D-1	P-1	B-1	M-1	HK-1	0-1	L-1	A-1	
	GRT816M	D-1	P-1	B-1	M-1	HK-1	0-1	L-2	A-1	
	GRT895MP	D-1	P-2	B-2	M-1	HK-1	0-1	L-4	A-1	
EU	GRT815E	D-1	P-2	B-2	M-1	HK-1	0-1	L-4	A-1	
	GRT815M	D-1	P-2	B-2	M-1	HK-1	0-1	L-4	A-1	
	GRT896SP	D-1	P-1	B-1	M-1	HK-1	0-1	L-2	A-1	<u></u>
	GRT816S	D-1	P-1	B-1	M-1	HK-1	0-1	L-2	A-1	<u></u>

How to Use Parts Differently.


This series of product uses the three different types of optical drive (Pi type and So type). When replacing the optical drive, use the Pi type parts for the Pi type optical drive, and use the So type parts for the So type optical drive.

Replace the peripheral parts of optical drive with the same type in the same way.

[How to identify the Pi and So types of parts]

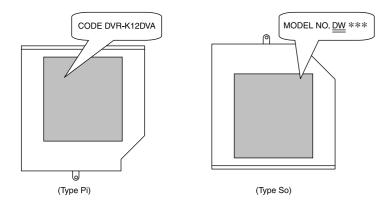

D-1. Optical Drive

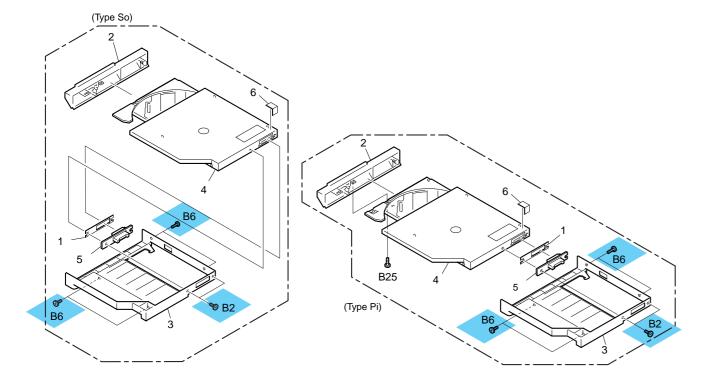


Ref.No.	Part No.		Description
1 3 5 6	4-654-837-01 X-4625-949-2 A-8067-975-A 4-677-675-01	\$	SHEET BAY BOARD ASSY BAY CASE COMPLETE PWB CNX-215 ODD CU FOIL
B2 B6	4-641-726-11 4-656-703-01		SCREW (M2), SPECIAL HEAD SCREW M2

				J						AM							EU			
Ref.No. Part No. Description	GRT77E/P	GRT55E/B	GRT7xE/P *	GRT7xE *	GRT5xE/P *	GRT5xE *	GRT270 *	GRT250 *	GRT230 *	GRT270G	GRT260G	GRT240G	GRT35F	GRT896HP	GRT816M	GRT895MP	GRT815E	GRT815M	GRT896SP	GRT816S
2 X-4625-936-1 ASSY SO DVD+-RW BEZEL (So)	•	•	•	•	•	•	•	•	•	•	•	•	•	•			•	•	•	•
X-4626-141-1 ASSY PIONEER DVR BEZEL (Pi)	•	•	•	•	•	•	•	•		•	•	•	•	•			•	•	•	•
X-4626-392-1 ASSY SONY CRX830 BEZEL (So)					•	•	•	•	•						•	•				
4 8-457-509-03 \$ # DVD DRIVE, DW-U50A-VN/T (So)	•	•	•	•	•	•	•	•	•	•	•	•	•	•			•	•	•	•
1-796-834-11 \$ # W-DVD (DVR-K12D)(Pi)	•	•	•	•	•	•	•	•		•	•	•	•	•			•	•	•	•
8-457-270-10					•	•	•	•	•						•	•				
B25 4-679-805-01 SCREW M1.7X2.5 (B) TAPPING BLK	•	•	•	•	•	•	•	•		•	•	•	•	•			•	•	•	•
	<u>A</u>									<u>^</u>	<u> </u>	<u> </u>	2						2	2
	₹									₹	₹	₹	₹						₹	₹
T1	2									Σ	Σ	≥	≥						Ž	Ž

- This parts list contains two different types of parts.
 The first type is the parts that are common to all models.
 The other type is the parts that are different depending on each model.
- The model that is accompanied by asterisk (*) is the CTO model.
- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。
- ・機種名に(*)がつくのはCTOモデルです。

P-1. Palmrest (16-inch Model)

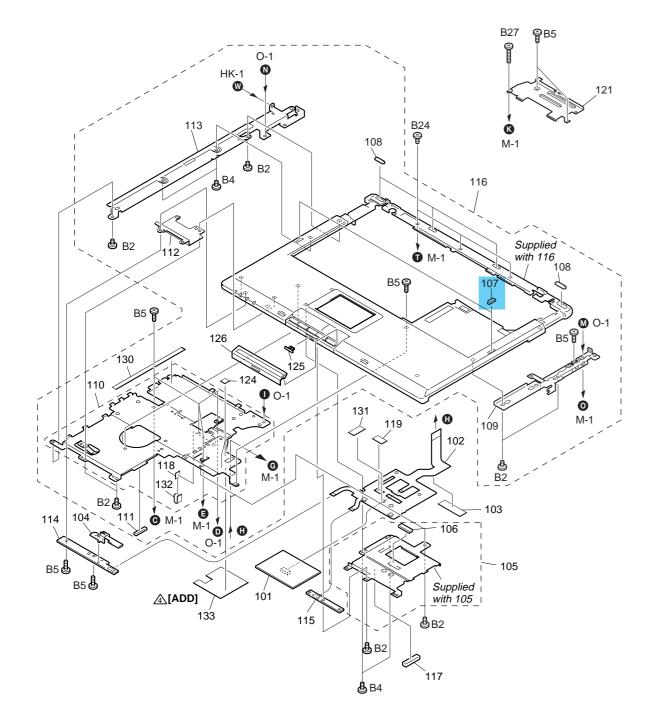


Ref.No.	Part No.		Description	
101 102 103 104 * 105	1-796-319-41 9-885-033-60 4-676-871-01 X-4625-918-1 X-4625-912-1		PAD, TOUCH PWB (H), FLEXIBLE PRINT ADHESIVE TP FPC ASSY LATCH DETECTOR ASSY TP BRACKET	
106 107 108 109 110	4-676-956-01 4-668-288-11 4-676-948-01 4-673-743-01 X-4625-910-1	&	GASKET T/P CONTACT CUSHION PALM RUBBER STOPPER PALMREST BRACKET R ASSY PALMREST SHIELDING L	
111 112 * 113 114 115	4-676-951-01 4-676-950-01 X-4626-178-1 A-8067-971-A A-8067-972-A	\$	GASKET SHIELDING CONTACT LEX BOARD PLATE ASSY PALMREST BRACKET L COMPLETE PWB LEX-47 COMPLETE PWB SWX-142	
117 118 119 * 121 124	4-677-944-01 4-676-954-01		GASKET CHARGER BOARD GASKET CD-ROM BRACKET ADHESIVE TP ASSY PALMREST SHIELDING R FAN PLATE MYLAR	
130 131 132 133	4-671-203-01 4-676-955-01 4-678-040-01 4-679-890-01		SHEET SHIELDING PALMREST MYLAR TP COPPER TAPE CD-ROM BKT TP CO-FOIL	— <u> </u>
B2 B4 B5 B24 B27	4-641-726-11 4-641-726-81 4-641-726-41 4-641-726-21 4-678-226-01		SCREW (M2), SPECIAL HEAD SCREW (M2), SPECIAL HEAD SCREW (M2), SPECIAL HEAD SCREW (M2), SPECIAL HEAD M2-SCREW	

			J			AM			E	U		
Ref.No. Part No.	Description	GRT77E/P	GRT7xE/P *	GRT7xE *	GRT270 *	GRT270G	GRT260G	GRT896HP	GRT816M	GRT896SP	GRT816S	
116 X-4625-906-1	ASSY PALMREST HOUSING		•	•	•			•	•	•	•	1
X-4626-046-1	ASSY PALMREST HOUSING (TV)	•	•	•		•	•					1
125 4-673-722-01	SLIDE WIRELESS KNOB (W)				•	•	•	•		•		1
126 4-673-719-01	ESCUSHION W/O WIRELESS (TV)(16)	•	•	•					-			<u>}</u>
X-4625-908-1	ASSY ESCUSHION (TV)(16)					•	•] -
4-673-719-11	ESCUSHION W/O WIRELESS (16)				•				•-		•	1
X-4626-219-1	ASSY ESCUSHION N-TV (16) (W)				•			•		•		
		A				2	2			2	2	
		7				\overline{z}	<u></u>			$\overline{}$	Æ	
		₹				Σ	Ž			Σ	È	

- This parts list contains two different types of parts.
 The first type is the parts that are common to all models.
 The other type is the parts that are different depending on each model.
- The model that is accompanied by asterisk (*) is the CTO model.
- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。
- ・機種名に(*)がつくのはCTOモデルです。
- The parts to which (W) is added after the part Description are used in the models in which the Wireless LAN is installed.
- The parts to which (TV) is added after the part Description are used in the models in which the TV Tuner is installed.
- ・部品名称のあとに (W) がつくのは、ワイヤレスラン搭載モデル用の部品です。
- ・部品名称のあとに (TV) がつくのは、TV チューナー搭載モデル用の部品です。

P-2. Palmrest (14-inch, 15-inch Model)

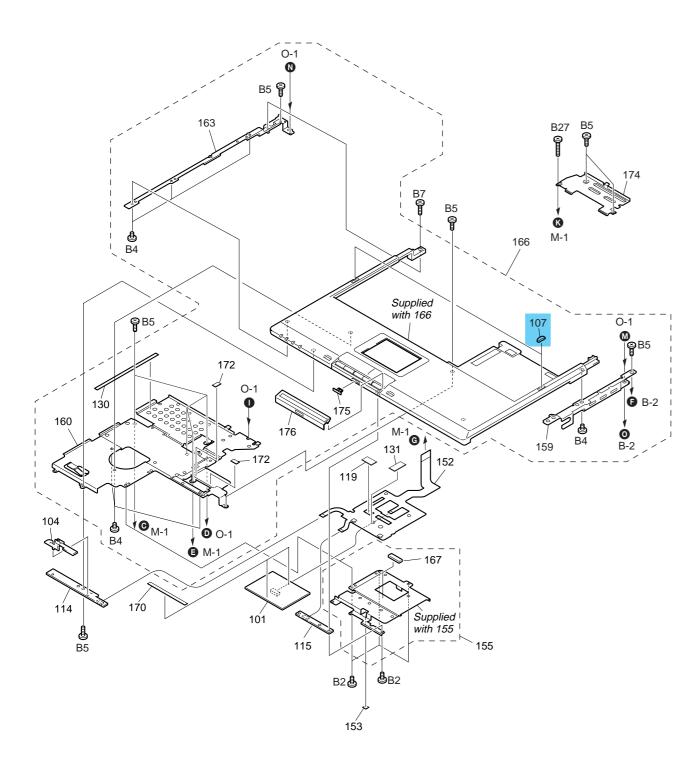


Ref.No.	Part No.		Description
101 104 107 114 115	X-4625-918-1 4-668-288-11 A-8067-971-A	\$ &	PAD, TOUCH ASSY LATCH DETECTOR CUSHION PALM COMPLETE PWB LEX-47 COMPLETE PWB SWX-142
119 130 131 152 153	4-676-955-01		ADHESIVE TP SHEET SHIELDING PALMREST MYLAR TP TP FPC ASSY SR R2.0 T/P-PW BD GASKET
			TP BRACKET BRACKET PALMREST R PALMREST SHIELDING L ASSY BRACKET PALMREST L T/P GASKET
170 172 174	4-677-676-01 4-677-673-01 X-4625-929-1		TOUCH PAD ADHESIVE SPACER BKT MYLAR PALMREST SHIELDING R ASSY
B2 B4 B5 B7 B27	4-641-726-11 4-641-726-81 4-641-726-41 4-645-214-71 4-644-899-21		SCREW (M2), SPECIAL HEAD SCREW (M2), SPECIAL HEAD SCREW (M2), SPECIAL HEAD GRIP, M2 M2-SCREW

			J			Α	M			EU	
Ref.No. Part No.	Description	GRT55E/B	GRT5xE/P *	GRT5xE *	GRT250 *	GRT230 *	GRT240G	GRT35F	GRT895MP	GRT815E	GRT815M
166 X-4625-914-1	ASSY PALMREST HOUSING		•	•	•	•		•	•	•	•
X-4625-945-1	ASSY PALMREST HOU (TV)	•	•	•			•				
175 4-673-683-01	SLIDE WIRELESS KNOB (W)				•	•	•	•	•		
176 4-673-701-01	ESCUSHION W/O WIRELESS (TV)(15)	•	•	•							
X-4625-923-1	ASSY ESCUSHION (TV)(15)						•				
4-673-701-11	ESCUSHION W/O WIRELESS (15)		•	•	•	•				•	•
X-4626-225-1	ASSY ESCUSHION N-TV (15) (W)				•			•	•		
This waste list as at in a	we different types of parts						[MA]	[MA]			

This parts list contains two different types of parts.
 The first type is the parts that are common to all models.
 The other type is the parts that are different depending on each model.

- The model that is accompanied by asterisk (*) is the CTO model.
- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。
- ・機種名に(*)がつくのはCTOモデルです。
- The parts to which (W) is added after the part Description are used in the models in which the Wireless LAN is installed.
- The parts to which (TV) is added after the part Description are used in the models in which the TV Tuner is installed.
- ・部品名称のあとに (W) がつくのは、ワイヤレスラン搭載モデル用の部品です。
- ・部品名称のあとに (TV) がつくのは、TV チューナー搭載モデル用の部品です。

B-1. Bottom (16-inch Model)

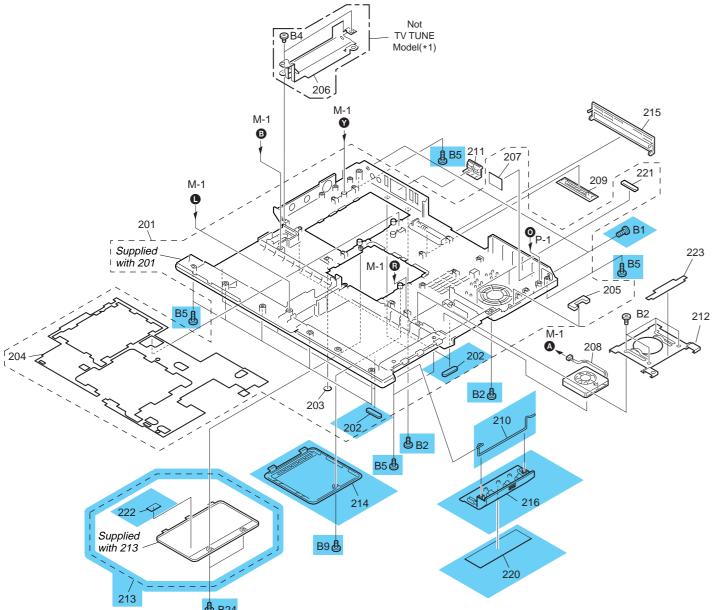


NGE TLET
RING ASSY
OR
X KET
AL HEAD AL HEAD AL HEAD AL HEAD

			J			AM			E	U	
Ref.No. Part No.	Description	GRT77E/P	GRT7xE/P *	GRT7xE *	GRT270 *	GRT270G	GRT260G	GRT896HP	GRT816M	GRT896SP	GRT816S
201 X-4626-447-1	ASSY HOUSING BOTTOM (16) (TV)	•	•	•		•	•				
X-4626-445-1	ASSY HOUSING BOTTOM (16)		•	•	•			•	•	•	•
206 4-673-748-01	BRACKET IO LEFT		•	•	•			•	•	•	•
B4 4-641-726-81	SCREW (M2), SPECIAL HEAD		•	•	•			•	•	•	•
		\triangle				2	2			2	2
		4				F	A			A	Æ
a narta liat aantaina tuva diff		È				È	È			[MA]	Ž

- This parts list contains two different types of parts.
 The first type is the parts that are common to all models.
 The other type is the parts that are different depending on each model.
- The model that is accompanied by asterisk (*) is the CTO model.
- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。
- ・機種名に(*)がつくのはCTOモデルです。
- *1 For the BRACKET IO LEFT of the Tuner model, refer to the Main Board.
- *1 TVチューナーモデルのBRACKET IO LEFTは、Main Boardを参照ください。
- The parts to which (TV) is added after the part Description are used in the models in which the TV Tuner is installed.
- ・部品名称のあとに (TV) がつくのは、TV チューナー搭載モデル用の部品です。

B-2. Bottom (14-inch, 15-inch Model)

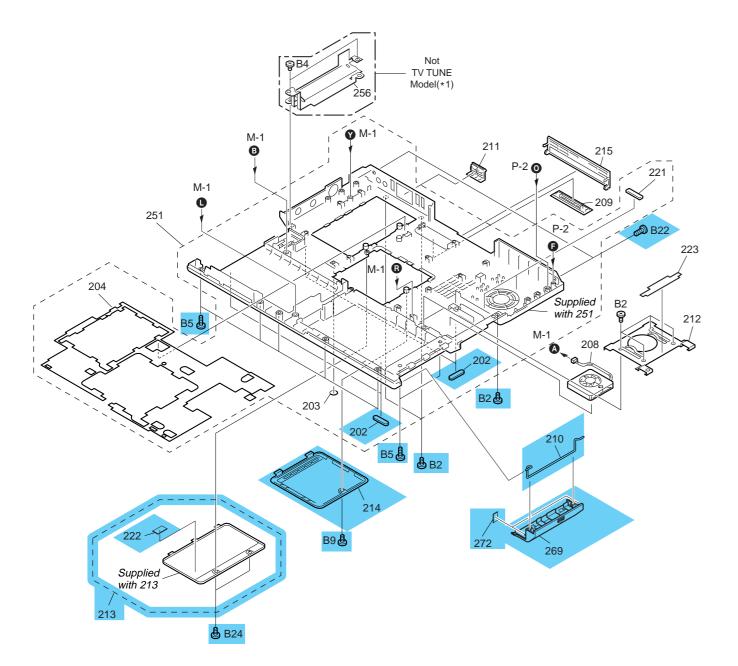


Ref.No.	Part No.		Description
202	4-668-294-11	&	FOOT FRONT
203	4-654-380-41		CAP BAY
204	4-673-888-01		SHIELDING MYLAR
208	A-8115-838-A		ASSY 3RD FAN
209	4-654-379-21		COVER (PORT)
210 211 * 212 213 214	X-4625-933-1		DOOR BATTERY SPRING CAP ETHERNET 3RD FAN SHIELDING ASSY DOOR MDC ASSY ASSY DOOR DIMM
215	X-4625-919-1	-	ASSY DOOR IO
221	4-676-461-01		LAN GASKET 20X5X5X
222	4-677-682-01		WIRELESS LAN GASKET
223	4-679-376-01		FAN S SHD MYLAR
269	X-4626-243-1		ASSY DOOR BATTERY
272	4-677-681-01	&	SPONGE DOOR BATTERY
B2	4-641-726-11	&	SCREW (M2), SPECIAL HEAD
B5	4-641-726-41	&	SCREW (M2), SPECIAL HEAD
B9	4-664-453-01	&	SCREW (M2), SPECIAL HEAD
B22	4-654-811-01	&	SCREW M3
B24	4-641-726-21	&	SCREW (M2), SPECIAL HEAD

			J			Α	M			EU	
Ref.No. Part No.	Description	GR T55F/R	5xE/	GRT5xE *	GRT250 *	GRT230 *	GRT240G	GRT35F	GRT895MP	GRT815E	GRT815M
251 X-4626-444-1	ASSY HOUSING BOTTOM (T)(15)	•	•	•			•				
X-4626-405-1	ASSY HOUSING BOTTOM (15)		•	•	•	•		•	•	•	•
256 4-673-804-01	BRACKET IO LEFT		•	•	•	•		•	•	•	•
B4 4-641-726-81	SCREW (M2), SPECIAL HEAD				•	•		•	•	•	•
	wo different types of parts. s that are common to all models.	-	•			-	[MA]	[MA] ⊘	-		

• This parts list contains two different types of parts. The first type is the parts that are common to all models. The other type is the parts that are different depending on each model. • The model that is accompanied by asterisk (*) is the CTO model.

- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。
- ・機種名に(*)がつくのはCTOモデルです。
- *1 For the BRACKET IO LEFT of the Tuner model, refer to the Main Board.
- *1 TVチューナーモデルのBRACKET IO LEFTは、Main Boardを参照ください。
- The parts to which (TV) is added after the part Description are used in the models in which the TV Tuner is installed.
- ・部品名称のあとに (TV) がつくのは、TV チューナー搭載モデル用の部品です。

M-1. Main Board

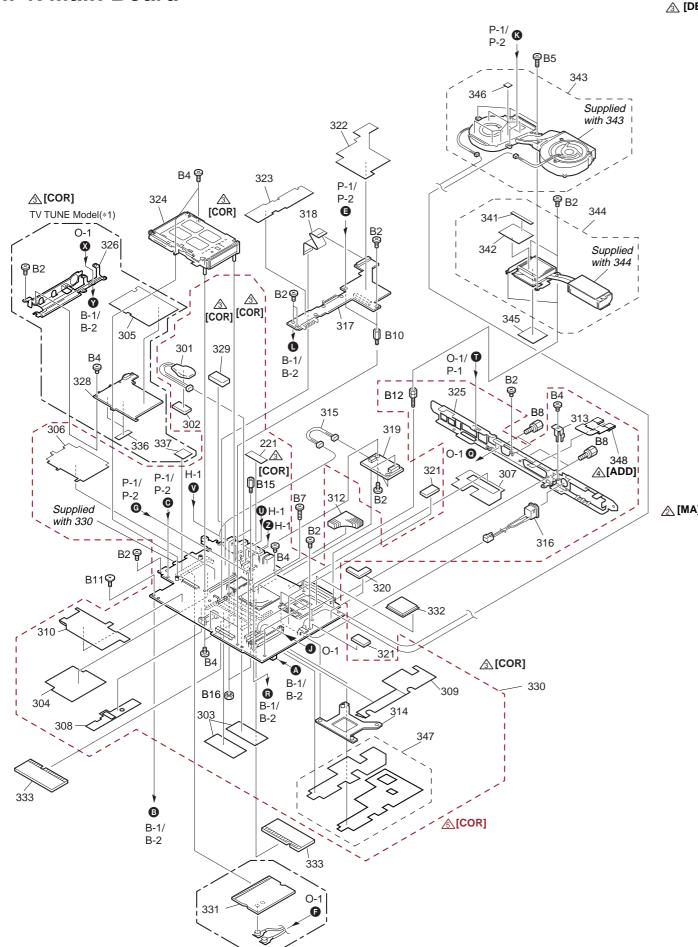

W-LAN Model

	Kellino.	<u>railino.</u>		Description
DEI	L] 211	4 673 986 01		CAP ETHERNET
DE	221 301 302	4-676-461-01 9-885-033-67		LAN GASKET 20X5X5X BATTERY, LITHIUM STORAGE SHEET (BATTERY), ADHESIVE SHEET DIMM
	304 306 307 308 309			SHEET MINI PCI SHEET PC CARD SHEET PORT SHEET DIMM SIDE SHEET HDD
	310 * 312 * 313 * 314 315	4-673-811-01		SHEET DRIVE NORTH BRIDGE HEATSINK DC IN HOLDER CPU BACK PLATE ASSY HARNESS (2P)
	316 317 318 319 320	9-885-033-72	\$ \$ #	DC, HARNESS COMPLETE PWB PWS-27 CABLE (30P), FLEXIBLE FLAT CARD, MODEM CMOS PAD U

Ref.No.	Part No.		<u>Description</u>
323 329	4-674-005-01 4-674-007-01 4-674-008-01 4-677-674-02 4-677-183-01		SPONGE CRYSTAL
343 345 346	4-677-668-01 A-8115-390-A 4-671-241-01 4-677-182-01 4-680-129-01	*	FIN MYLAR ASSY FAN UNIT SHEET THERMAL (STH) FAN PLATE MYLAR MB HEAT FOIL MYLAR
348	4-676-505-01		SPRING M BKT IO ← [ADD]
B5 B7	4-641-726-11 4-641-726-81 4-641-726-41 4-645-214-71 4-635-966-01		SCREW (M2), SPECIAL HEAD SCREW (M2), SPECIAL HEAD SCREW (M2), SPECIAL HEAD GRIP, M2 SCREW (HEX)
B10 B11 B12 B13 B15			SPACER (PWS) SCREW (MBX) SPACER (CPU), H=5 SPACER (PWS) H=8.0 SPACER (VIF)
B16	7-622-205-05		NUT (M2 TYPE2), HEXAGON

					_			J						AM							EU			_
	Ref.No. Part No.			Description	GRT77E/P	GRT55E/B	GRT7xE/P *	GRT7xE *	GRT5xE/P *	GRT5xE *	GRT270 *	GRT250 *	GRT230 *	GRT270G	GRT260G	GRT240G	GRT35F	GRT896HP	GRT816M	GRT895MP	GRT815E	GRT815M	GRT896SP	
	305 4-674-003-01			TUNER BD MYLAR	•	•	•	•	•	•				•	•	•								t
	324 9-885-033-66			CONNECTOR PC CARD (1 SLOT) (TV)	•	•	•	•	•	•				•	•	•								t
	9-885-033-62			CONNECTOR PC CARD (2 SLOT)					•				•				•	•	•	•	•	•	•	t
	325 X-4626-179-1			ASSY BRACKET IO (16)	•		•	•	Ť	Ť	•	Ť	-	•	•			•	•	_	Ť	Ť	•	t
	X-4625-954-1			ASSY BRACKET I/O (15)		•	\vdash		•	•		•	•			•	•			•	•	•		t
	326 X-4625-909-1			ASSY BRACKET IO LEFT (T) (16) (TV)	•		•	•						•	•									t
	X-4625-935-1			ASSY BRACKET IO LEFT (T) (15)		•	\vdash		•	•						•								t
	328 A-8068-269-A			COMPLETE PWB ENX-23 (J)	•	•	•	•	•	•				\neg										t
	A-8068-275-A			COMPLETE PWB ENX-23 (U)			\vdash							•	•	•								t
	330 A-8068-515-A	•	#	COMPL MBX-86 (2) (15) (S)	_				•				•	-	-		•			•	•	•		t
	A-8068-516-A		#	COMPL MBX-86 (2) (16) (S)	_		•	•	Ť	Ť	•	-						•			Ť	Ť	•	t
	A-8068-517-A		#	COMPL MBX-86 (2T) (15) (S) (TV)	_		H	_	•		-	\vdash				•		F-	Ë					t
	A-8068-518-A		#	COMPL MBX-86 (2T) (16) (S) (TV)	•	-	•	•	-	F-		\vdash		•	•									t
	331 1-761-784-21		#	CARD, WIRELESS LAN			Ť	_						-	_			•		•			•	t
	1-761-784-31		#	CARD, WIRELESS LAN							•	•		•	•	•								t
	1-761-784-32	_	#	CARD, WIRELESS LAN			\vdash							\neg	-		•							t
2	332 6-704-665-01	٠	#	IC RK80532PE072512SL6PF (P4 2.8)	_		•	•	•	•	• a	●a	• a	•	•		•	•	•	•	•	•	•	t
_	6-704-666-01			IC RK80532PE067512SL6PE (P4 2.66)	-		Ť	Ť	Ť	Ť	• a		• a	-		•		Ť	Ť		Ť	Ť		t
	6-704-957-01			IC RH80532NC049256SL73Y (C 2.2)																				t
	6-705-187-01			IC RH80532GC064512SL6WZ (P4-M 2.6)		l-	_				• b	• b	• b											t
	6-704-615-01			IC RH80532GC056512SL6VC (P4-M 2.4)			\vdash				• b		• b	\neg	-									t
	6-704-614-01			IC RH80532GC049512SL6VB (P4-M 2.2)							• b		• b											t
	6-704-652-01			IC RH80532NC041256SL6VJ (C 2.0)							• b	• b	• b											t
	6-704-668-01			IC RK80532PE056512SL6PC (P4 2.4B)			•	•	•	•	• a	• a	• a											t
	333 A-8068-348-A			COMPLETE PWB MM-10A (DDR 512MB)			•	•	•	•	•	•	•	●X1									●X2	t
	6-705-094-01			IC M470L3224FT0-CB3 (DDR 256MB)	●X2	●X1	•	•	•	•	•	•	•		●X2	●X2	●X2	●X2	●X2	●X2	●X2	●X2		1
	336 4-677-894-02			BUSTERAID TUNER	•	•	•	•	•	•				•	•	•								t
	337 4-677-893-01			BUSTERAID MBX	•	•	•	•	•	•				•	•	•								Г
2	344 4-673-983-01	\$		FIN MODULE STH	•		•	•	•	•	• a	• a	●a	•	•	•	•	•	•	•	•	•	•	t
	4-673-984-01	S		FIN MODULE MOBILE		•					• b	• b	• b											T
					Λ									A	<u> </u>	2	<u>^</u>						A	
					4									4									4	. 4
					[MA]									[MA]	[MA]	⋖	[MA]						[MA]	
					5									_	-	-	-						_	

This parts list contains two different types of parts.
 The first type is the parts that are common to all models.
 The other type is the parts that are different depending on each model.
 The model that is accompanied by asterisk (*) is the CTO model.

- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。
- といい中国なは、1後任六四ツ中国と、1次任によりではいかりから安な中国にカが11で、
- ・機種名に(*)がつくのはCTOモデルです。
- *1 For the BRACKET IO LEFT of the model without Tuner, refer to the Bottom.
- *1 TVチューナーのないモデルのBRACKET IO LEFTは、Bottomを参照ください。
- The parts to which (TV) is added after the part Description are used in the models in which the TV Tuner is installed.
- ・部品名称のあとに (TV) がつくのは、TV チューナー搭載モデル用の部品です。


[For CTO

*2 The FIN MODULE in use is different depending on the CPU.

For the parts of Ref. 332 and Ref. 344, select a combination of the same type (either type a or type b) of Ref. 332 and Ref. 344.

*2 CPUによって、使用する FIN MODULE が異なります。 Ref. 332 と Ref. 344 は、同じタイプ (a or b) の部品を組み合わせて使ってください。

HK-1. Hood Keyboard

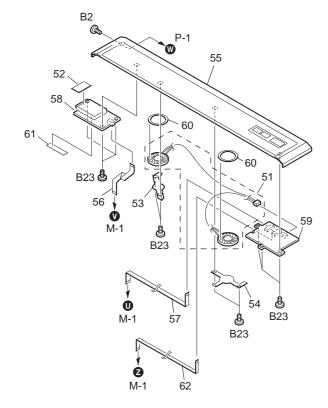



Ref.No.	Part No.		Description
52 53 56 57 58	4-671-590-01 4-673-789-01 9-885-033-70 9-885-033-71 A-8068-549-A	\$	SHEET (MS) (C) SPEAKER HOLDER L CABLE (10P), FLEXIBLE FLAT CABLE (11P), FLEXIBLE FLAT COMPLETE PWB IFX-257
59 60 61 62	A-8068-274-A 4-677-458-01 A-8116-337-A	\$	COMPLETE PWB SWX-155 SPERKER RING GULE CAPTON TAPE (7X20) CABLE(8P) FLEXIBLE FLAT
B2 B23	4-641-726-11 4-639-112-01	&	SCREW (M2), SPECIAL HEAD SCREW (M2X4)


					J						AIVI							EU			
Ref.No. Part No.	Description	GRT77E/P	GRT55E/B	GRT7xE/P *	GRT7xE *	GRT5xE/P *	GRT5xE *	GRT270 *	GRT250 *	GRT230 *	GRT270G	GRT260G	GRT240G	GRT35F	GRT896HP	GRT816M	GRT895MP	GRT815E	GRT815M	GRT896SP	GRT816S
51 A-8116-871-A	SPEAKER UNIT (FO-2+)(16)	•		•	•			•			•	•			•	•				•	•
A-8116-869-A	SPEAKER UNIT FO-2 (15)		•			•	•		•	•			•	•			•	•	•		
54 4-679-084-01	SPEAKER HOLDER R (16)	•		•	•			•			•	•			•	•				•	•
4-679-081-01	SPEAKER HOLDER R (15)		•			•	•		•	•			•	•			•	•	•		
55 X-4626-394-1	ASSY HOOD KEYBOARD (16)	•		•	•			•			•	•			•	•				•	•
X-4626-393-1	ASSY HOOD KEYBOARD (15)		•			•	•		•	•			•	•			•	•	•		
		[MA]			•						(MA)	[MA]	[MA]	[MA]						[MA]	[MA]
	51 A-8116-871-A A-8116-869-A 54 4-679-084-01 4-679-081-01 55 X-4626-394-1	51 A-8116-871-A SPEAKER UNIT (F0-2+)(16) A-8116-869-A SPEAKER UNIT F0-2 (15) 54 4-679-084-01 SPEAKER HOLDER R (16) 4-679-081-01 SPEAKER HOLDER R (15) 55 X-4626-394-1 ASSY HOOD KEYBOARD (16)	Ref.No. Part No. Description 9	Ref.No. Part No. Description U U U U U U U U U	Ref.No. Part No. Description 9 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Ref.No. Part No. Description Image: Control of the con	Ref.No. Part No. Description Descripti	Ref.No. Part No. Description Descripti	Ref.No. Part No. Description Descripti	Ref.No. Part No. Description Descripti	Ref.No. Part No. Description Descripti	Ref.No. Part No. Description ST A-8116-871-A SPEAKER UNIT (F0-2+)(16) 4-679-084-01 SPEAKER HOLDER R (16) 4-679-081-01 SPEAKER HOLDER R (15) 55 X-4626-393-1 ASSY HOOD KEYBOARD (16) ASSY HOOD KEYBOARD (15) ASSY HOOD KEYBOARD (15)	Ref.No. Part No. Description S1 A-8116-871-A SPEAKER UNIT (FO-2+)(16) A-8116-869-A SPEAKER UNIT FO-2 (15) 54 4-679-084-01 SPEAKER HOLDER R (16) 4-679-081-01 SPEAKER HOLDER R (16) 55 X-4626-393-1 ASSY HOOD KEYBOARD (16) X-4626-393-1 ASSY HOOD KEYBOARD (15)	Ref.No. Part No. Description 51 A-8116-871-A SPEAKER UNIT (FO-2+)(16) A-8116-869-A SPEAKER HOLDER R (16) 4-679-084-01 SPEAKER HOLDER R (16) 4-679-084-01 SPEAKER HOLDER R (15) 55 X-4626-393-1 ASSY HOOD KEYBOARD (15) ASSY HOOD KEYBOARD (15) ASSY HOOD KEYBOARD (15)	Ref.No. Part No. Description 51 A-8116-871-A SPEAKER UNIT (FO-2+)(16) A-8116-869-A SPEAKER HOLDER R (16) 4-679-084-01 SPEAKER HOLDER R (16) 55 X-4626-393-1 ASSY HOOD KEYBOARD (15) ASSY HOOD KEYBOARD (15) Description Description	Ref.No. Part No. Description \$\begin{array}{c ccccccccccccccccccccccccccccccccccc	Ref.No. Part No. Description S1 A-8116-871-A SPEAKER UNIT (FO-2+)(16) A-8116-869-A SPEAKER UNIT FO-2 (15) 54 4-679-084-01 SPEAKER HOLDER R (16) 4-679-084-01 SPEAKER HOLDER R (15) 55 X-4626-393-1 ASSY HOOD KEYBOARD (15) ASSY HOOD KEYBOARD (15)	Ref.No. Part No. Description ST A-8116-871-A SPEAKER UNIT (FO-2+)(16) A-8116-869-A SPEAKER HOLDER R (16) 4-679-084-01 SPEAKER HOLDER R (16) 55 X-4626-393-1 ASSY HOOD KEYBOARD (16) ASSY HOOD KEYBOARD (15) Description Description	Ref.No. Part No. Description \$\begin{array}{c ccccccccccccccccccccccccccccccccccc	Ref.No. Part No. Description ST A-8116-871-A A-8116-871-A SPEAKER UNIT (FO-2+)(16) A-8116-869-A SPEAKER HOLDER R (16) 4-679-084-01 SPEAKER HOLDER R (16) 4-679-084-01 SPEAKER HOLDER R (16) 55 X-4626-393-1 ASSY HOOD KEYBOARD (15) ARRIVAL W W W W W W W W W W W W W W W W W W W	Ref.No. Part No. Description 51 A-8116-891-A SPEAKER UNIT (FO-2+)(16) A-8116-869-A SPEAKER UNIT (FO-2+)(16) 54 4-679-081-01 SPEAKER HOLDER R (16) 4-679-081-01 SPEAKER HOLDER R (15) 55 X-4626-393-1 ASSY HOOD KEYBOARD (16) ASSY HOOD KEYBOARD (15) A A A A A A A A A A A A A A A A A A A

- This parts list contains two different types of parts.
 The first type is the parts that are common to all models.
 The other type is the parts that are different depending on each model.
- The model that is accompanied by asterisk (*) is the CTO model.
- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。
- ・機種名に (*) がつくのは CTO モデルです。

Confidential

PCG-GRT55E/GRT5XE*/GRT77E/GRT7XE* (J)
PCG-GRT35F/GRT230*/GRT240G/GRT250*/GRT260G/GRT270*/GRT270G (AM)
PCG-GRT815E/GRT815M/GRT816M/GRT816S/GRT895MP/GRT896HP/GRT896SP (EU)


O-1. Other Parts

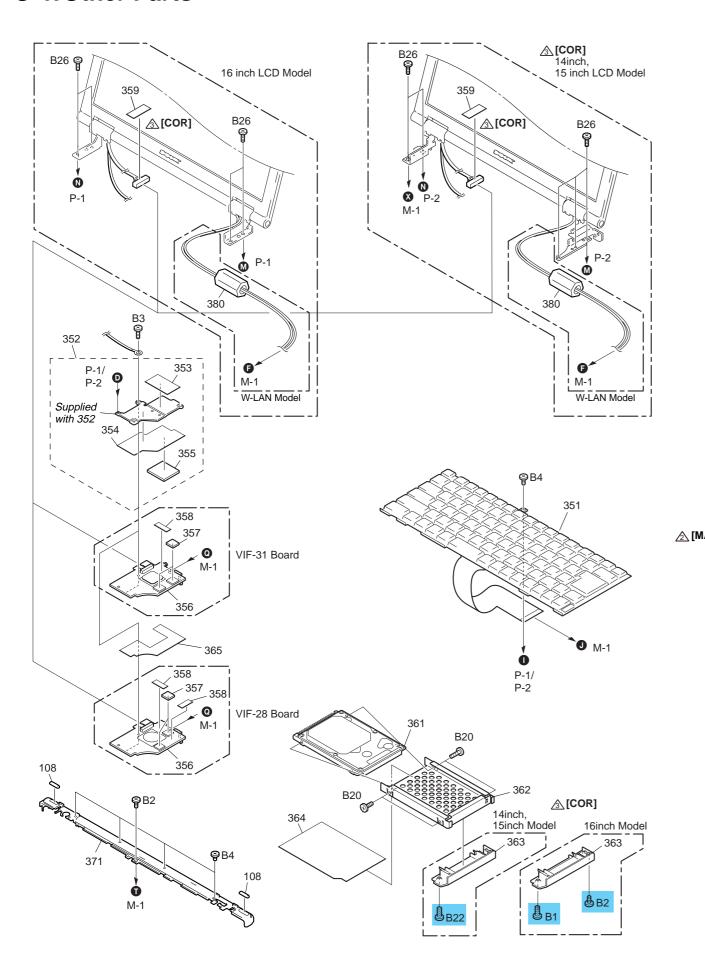

Ref.No.	Part No.	Description
	4-676-948-01 X-4625-931-2 4-670-461-01 4-673-987-01 4-676-423-01	RUBBER STOPPER VGA HEAT PLATE ASSY SHEET BLIND (PLATE HEATSINK) VGA PLATE MYLAR VGA THERMAL PAD
357 358 359 362 364	4-677-667-01 4-677-943-01 	VGA PAD VGA MYLAR CAPTON TAPE —— 🔊 [ADD] BRACKET HDD SHEET HDD
B1 B2 B3 B4 B5	4-654-811-41 4-641-726-11 4-656-703-01 4-641-726-81 4-641-726-41	 SCREW M3 SCREW (M2), SPECIAL HEAD SCREW (M2), SPECIAL HEAD SCREW (M2), SPECIAL HEAD SCREW (M2), SPECIAL HEAD
B20 B22 B26	4-635-301-11 4-654-811-01 4-644-637-01	SCREW M3X4 SCREW M3 GRIP, M2 EG


							J						AM							EU				
	Ref.No. Part No.		Description	GRT77E/P	GRT55E/B	GRT7xE/P *	GRT7xE *	GRT5xE/P *	GRT5xE *	GRT270 *	GRT250 *	GRT230 *	GRT270G	GRT260G	GRT240G	GRT35F	GRT896HP	GRT816M	GRT895MP	GRT815E	GRT815M	GRT896SP	GRT816S	
	351 1-478-018-11	\$ #	KEY BOARD UNIT (JP)	•	•	•	•	•	•															
	1-478-018-21	\$ #	KEY BOARD UNIT (US)							•	•	•	•	•	•									
	1-478-023-11	\$ #	(UK/Dutch)KEY BOARD UNIT (GB)														•	•	•	•	•	•	•	
	1-478-023-21	\$ #	(German)KEY BOARD UNIT (DE)														•	•	•	•	•	•	•	
	1-478-023-31	\$ #	(Swiss)KEY BOARD UNIT (CH)														•	•	•	•	•	•	•	
	1-478-023-41	\$ #	(French)KEY BOARD UNIT (FR)														•	•	•	•	•	•	•	
	1-478-023-51	\$ #	(Italian)KEY BOARD UNIT (IT)														•	•	•	•	•	•	•	
MA1	1-478-023-61	\$ #	KEY BOARD UNIT (LA)													•								
· •	1-478-023-81	\$ #	(Spanish)KEY BOARD UNIT (ES)														•	•	•	•	•	•	•	
	1-478-023-91	\$ #	(Swedish)KEY BOARD UNIT (SE)														•	•	•	•	•	•	•	
Г	356 A-8068-276-A	\$	COMPLETE PWB VIF-31	•	•			•	•		•	•			•	•			•					
	A-8068-509-A	\$	COMPLETE PWB VIF-28			•	•			•			•	•			•	•		•	•	•	•	
	361 A-8116-404-A	\$ #	HDD (40GB,IC25N040ATMR04)			•	•	•	•	•	•	•												
	A-8116-402-A	\$ #	HDD (60GB,IC25N060ATMR04)		•	•	•	•	•	•	•	•			•		•	•	•	•				
	A-8067-943-A	\$ #	ASSY HDD 80GB (I,40)(S)	•		•	•	•	•	•	•		•	•		•					•	•	•	
	A-8113-860-A	\$ #	ASSY HDD 30GB(H)(S)									•						\neg		$\overline{}$				· <u>∕</u> 3 [COR]
	A-8117-059-A	\$ #	HDD (DK23FA-40,40G)			•	•	•	•	•	•	•						==		=				
	A-8117-585-A	\$ #	HDD (DK23FA-60,60G)		•	•	•	•	•	•	•	•			•		•	•	•	۰				
	A-8117-058-A	\$ #	ASSY HDD 80GB (H,40)(S)			•	•	•	•	•	•		•	•		•		д			•	•	•	
Г	363 X-4626-446-1		ASSY DOOR HDD	•		•	•			•			•	•			•	•				•	•	
	4-673-686-01		DOOR HDD(15)		•			•	•		•	•			•	•		П	•	•	•			
Г	365 X-4626-407-1		HEAT PLATE			•	•			•			•	•			•	•		•	•	•	•	
Г	371 X-4625-916-1		ASSY DISPLAY BASE		•			•	•		•	•			•	•		П	•	•	•			
	380 1-400-255-21		FERRITE CORE							•	•		•	•	•	•	•		•			•		
				[MA]	•								<u></u> [MA]	<u></u> [MA]	<u></u> [MA]	<u> </u>	2	- 3 - 3 - 3 - 3 - 3 - 3 - 3 - 3 - 3 - 3				<u></u> [MA]	[MA]	

- This parts list contains two different types of parts.
 The first type is the parts that are common to all models.
 The other type is the parts that are different depending on each model.
- The model that is accompanied by asterisk (*) is the CTO model.
- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。
- ・機種名に (*) がつくのは CTO モデルです。

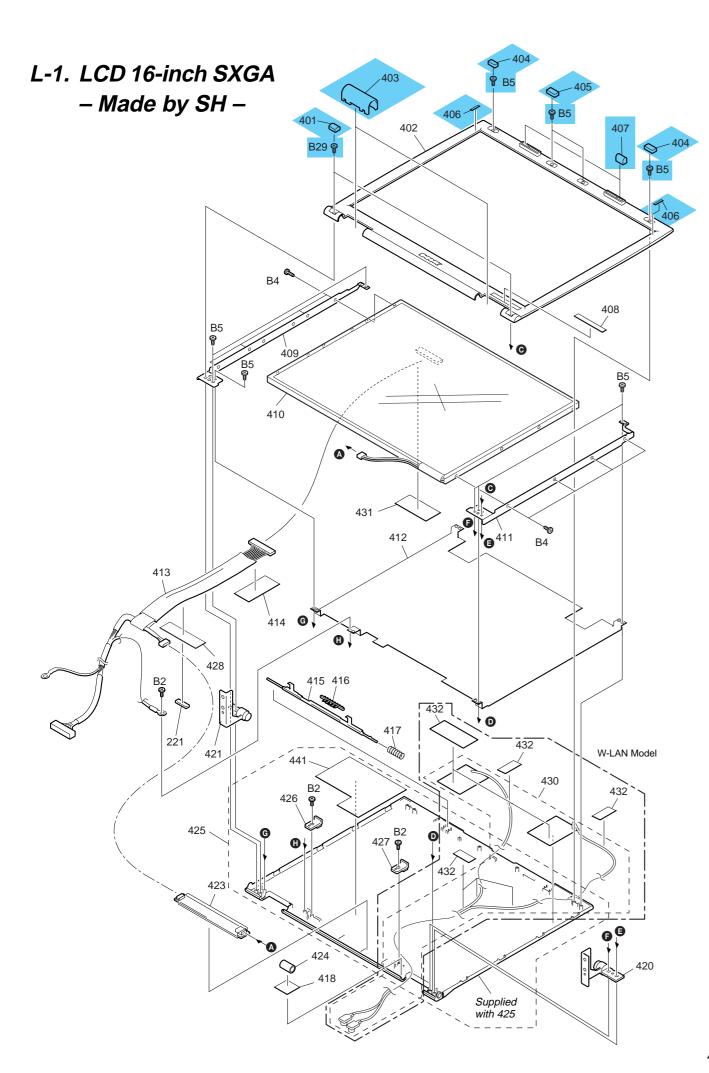

Ref.No.	Part No.		<u>Description</u>
221	4-676-461-01	&	LAN GASKET 20X5X5X
401	4-674-542-01		COVER SCREW LOWER
402	A-8115-904-A		ASSY HOUSING BEZEL/SH
403	4-673-716-01		COVER HINGE
404	4-674-540-01		COVER SCREW UPPER
405	4-674-541-01	&	COVER SCREW MIDDLE
406	4-672-201-11		CUSHION BEZEL
407	4-674-539-01		CUSHION LATCH
408	4-679-379-11		LABEL ID GRT896HP
409	4-673-753-01		BRACKET LCD SH L
410	A-8112-385-A	\$#	ASSY LCD SXGA 16 (S)
411	4-673-752-01		BRACKET LCD SH R
412	4-676-870-01		SHIELD DISPLAY
413	9-885-031-90		LCD HARNESS (16SXGA)
414	4-677-679-01		FOIL LCD HARNESS
415	4-673-727-01		LATCH HONTAI
416	4-673-728-01		LATCH BUTTON
417	4-671-640-01		GT2 SPRING_LATCH
418	4-673-316-01		GT2 CUSHION WL CABLE
420	4-673-736-01		HINGE R
421	4-673-735-01		HINGE L
423	1-476-316-31		INVERTER UNIT
424	4-670-045-01		GT2 TUBE WL CABLE
425	A-8115-902-A		ASSY HOUSING DISPLAY
426	4-673-730-01		LCD HOOK BASE L SH
427 428 430 431 432	4-673-731-01 4-672-403-01 1-754-295-11 4-680-130-01		LCD HOOK BASE R SH COPPER TAPE LCD ED ANTENNA, FILM (L AND R) CU-FOIL WITH MYLAR FILAMENT TAPE
441	4-677-784-01		FOIL INVERTER
B2 B4 B5 B29	4-641-726-11 4-641-726-81 4-641-726-41 4-641-726-91	& &	

- This parts list contains two different types of parts.
 The first type is the parts that are common to all models.
 The other type is the parts that are different depending on each model.
- The model that is accompanied by asterisk (*) is the CTO model.
- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。
- ・機種名に(*)がつくのはCTOモデルです。

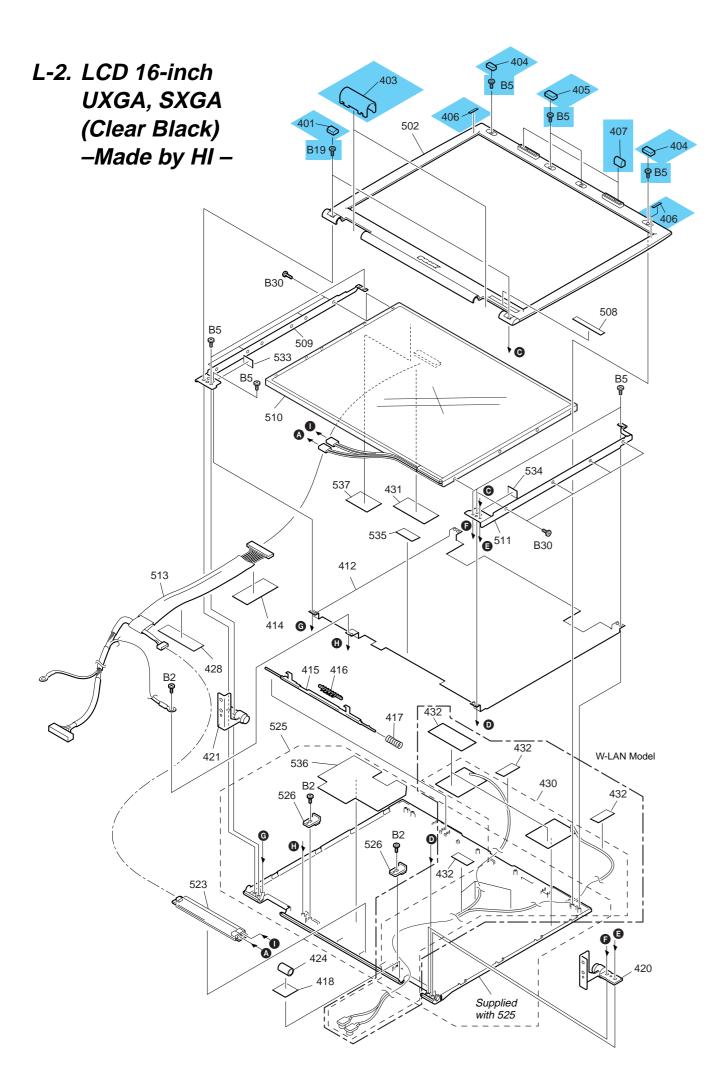


Ref.No.	Part No.		Description
401 403 404 405 406	4-674-542-01 4-673-716-01 4-674-540-01 4-674-541-01 4-672-201-11	&	COVER SCREW LOWER COVER HINGE COVER SCREW UPPER COVER SCREW MIDDLE CUSHION BEZEL
414	4-674-539-01 4-676-870-01 4-677-679-01 4-673-727-01 4-673-728-01	&	CUSHION LATCH SHIELD DISPLAY FOIL LCD HARNESS LATCH HONTAI LATCH BUTTON
418 420 421	4-671-640-01 4-673-316-01 4-673-736-01 4-673-735-01 4-672-403-01		GT2 SPRING_LATCH GT2 CUSHION WL CABLE HINGE R HINGE L COPPER TAPE LCD ED
431 502 509 511 513	4-680-130-01 A-8115-903-A 4-673-750-01 4-673-749-01 9-885-031-89		CU-FOIL WITH MYLAR ASSY HOUSING BEZEL/HI BRACKET LCD HI L BRACKET LCD HI R LCD HARNESS
523 525 526 533 534	1-478-040-11 A-8115-984-A 4-673-729-01 4-676-481-01 4-676-482-01		INVERTER UNIT ASSY HOUSING DISPLAY 16(SBL)(S) LCD HOOK BASE HI SHEET BRACKET LCD L HIT SHEET BRACKET LCD R HIT
535 536	4-670-396-01 4-676-932-01		SHEET COPPER(PLATE HEATSINK) PLATE INVERTER
	4-641-726-11 4-641-726-41 4-641-726-91 4-636-559-01	& &	

Г						J			AM			EU	
	Ref.No	. Part No.		Description	GRT77E/P	GRT7xE/P *	GRT7xE *	GRT270 *	GRT270G	GRT260G	GRT816M	GRT896SP	GRT816S
	424	4-672-196-01		TUBE WL CABLE				•	•	•		•	
	430	1-754-295-11		ANTENNA, FILM (L AND R)				•	•	•		•	
	432			FILAMENT TAPE					•	•		•	
<u></u> [MA]	508	4-678-549-01		LABEL ID	•								
		4-679-379-21		LABEL ID							•		
<u> </u>		4-679-379-61		LABEL ID								•	
<u> </u>		4-679-379-71		LABEL ID									•
∕2∖ [MA]		4-679-392-11		LABEL ID					•				
<u>∕</u> [MA]		4-679-392-21		LABEL ID						•			
A [ADD]		4-678-552-01		LABEL ID		•							
(ADD)		4-678-552-11		LABEL ID			•						
/₄\ [ADD]		4-678-552-21		LABEL ID		•							
A [ADD]		4-678-552-31		LABEL ID			•						
/∆ [ADD] L		4-679-141-11		LABEL ID (UCTO)				•					
(ADD)		4-679-141-21		LABEL ID (UCTO)				•					
[ADD]		4-679-141-31		LABEL ID (UCTO)				•					
247 6 1	510	A-8115-722-A	\$ #	LCD UNIT (16TFT-UXGA-HI)(S)		•	•	•	•			•	
<u></u>		A-8115-721-A	\$ #	LCD UNIT (16TFT-SXGA+-HI)(S)	•	•	•			•	•		•
	537	4-680-580-01		BUSTERAID W-LAN				•	•	•			
					<u></u> [MA]				[MA]	[MA]		҈ [MA]	<u> </u>

- This parts list contains two different types of parts. The first type is the parts that are common to all models. The other type is the parts that are different depending on each model.

 • The model that is accompanied by asterisk (*) is the CTO model.
- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。
- ・機種名に (*) がつくのは CTO モデルです。

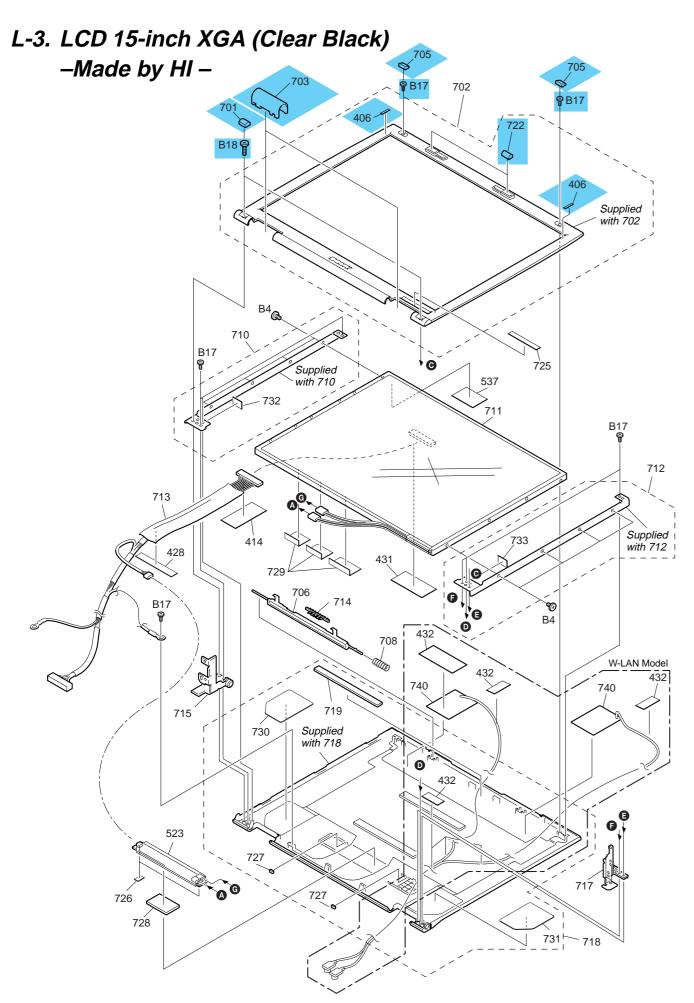


Ref.No.	Part No.		Description
406 414		&	CUSHION BEZEL FOIL LCD HARNESS
428	4-672-403-01		COPPER TAPE LCD ED
431	4-680-130-01		CU-FOIL WITH MYLAR
523	1-478-040-11		INVERTER UNIT
701	4-672-197-11	&	COVER SCREW LOWER
702	A-8115-900-A		ASSY HOUSING BEZEL 15 HIT
703	4-667-073-11	&	COVER HINGE
705	4-672-198-11	&	COVER SCREW UPPER
706	4-673-710-01		LATCH HONTAI
=			000000 (1.4701) 004400500001
708	4-672-199-01		SPRING (LATCH), COMPRESSION
710 711	X-4626-189-1 A-8115-792-A	\$#	ASSY BRACKET LCD L HIT
711	X-4626-190-1	Ф#	ASSY LCD 15XGA(HI)(S) ASSY BRACKET LCD R HIT
712	9-885-031-25		LCD HARNESS
113	9-000-031-20		LCD HARNESS
714	4-670-668-11		LATCH BUTTON
715	4-673-807-11		HINGE L
717	4-673-808-11		HINGE R
718	A-8115-897-A		ASSY DISPLAY HOUSING 15(SBR)(S)
719	4-676-424-01		SHEET DISPLAY HOUSING HIT
722	4-672-202-11	&	CUSHION LATCH
726	4-676-478-01		SHEET DISPLAY HOUSING HIT 2
727	4-676-479-01		SHEET DISPLAY HOUSING HIT 3
728			SHEET PLATE LCD
729	4-676-480-01		FOIL LCD HIT
730	4-678-912-01		SHEET PLATE LCD L
731	4-678-911-01		SHEET PLATE LCD R
732			SHEET BRACKET I CD I HIT
733			SHEET BRACKET LCD R HIT
, 00	. 570 102 01		S SIGNORE! LOD IVIII
B4	4-641-726-81		SCREW (M2), SPECIAL HEAD
B17	4-641-726-61	&	SCREW (M2), SPECIAL HEAD
B18	4-664-453-21	&	SCREW (M2X7), SPECIAL HEAD

		a/askt	# d/2	* ш	* (ြ	Г
	Description	6	GRT5xE/P	GRT5xE	GRT250	GRT240G	
Ref.No. Part No.	Description FILAMENT TAPE	-	+-	\vdash	•	•	┝
		-	+-	\vdash	L-	•	┝
			+-	\vdash	<u> </u>	Ť	┝
			—	\vdash	<u> </u>		L
4-679-392-31			\perp			•	L
4-678-549-11	LABEL ID	•					L
4-678-552-41	LABEL ID		•				
4-678-552-51	LABEL ID			•			Г
4-678-552-61	LABEL ID		•				Г
4-678-552-71	LABEL ID		\top	•			Г
4-679-141-41	LABEL ID (UCTO)		1		•		Г
4-679-141-51	LABEL ID (UCTO)		+		•		Г
4-679-141-61	LABEL ID (UCTO)		1		•		Г
740 1-754-295-21	ANTENNA. FILM (L AND R)		\top		•	•	Г
	,					<u>^</u>	_
						4	-
	4-678-552-41 4-678-552-51 4-678-552-61 4-678-552-71 4-679-141-41 4-679-141-51	537 4-680-580-01 BUSTERAID W-LAN 725 4-679-188-11 LABEL ID 4-679-392-31 LABEL ID 4-678-552-41 LABEL ID 4-678-552-51 LABEL ID 4-678-552-61 LABEL ID 4-678-552-71 LABEL ID 4-678-552-71 LABEL ID 4-679-141-41 LABEL ID 4-679-141-61 LABEL ID (UCTO) 4-679-141-61 LABEL ID (UCTO)	537 4-680-580-01 BUSTERAID W-LAN 725 4-679-188-11 LABEL ID 4-679-392-31 LABEL ID 4-678-549-11 LABEL ID 4-678-552-41 LABEL ID 4-678-552-51 LABEL ID 4-678-552-61 LABEL ID 4-678-552-71 LABEL ID 4-679-141-41 LABEL ID 4-679-141-51 LABEL ID (UCTO) 4-679-141-61 LABEL ID (UCTO)	537 4-680-580-01 BUSTERAID W-LAN 725 4-679-188-11 LABEL ID 4-679-392-31 LABEL ID 4-678-549-11 LABEL ID 4-678-552-41 LABEL ID 4-678-552-51 LABEL ID 4-678-552-61 LABEL ID 4-678-552-71 LABEL ID 4-679-141-41 LABEL ID 4-679-141-51 LABEL ID (UCTO) 4-679-141-61 LABEL ID (UCTO)	537 4-680-580-01 BUSTERAID W-LAN 725 4-679-188-11 LABEL ID 4-679-392-31 LABEL ID 4-678-552-41 LABEL ID 4-678-552-51 LABEL ID 4-678-552-61 LABEL ID 4-678-552-71 LABEL ID 4-679-141-41 LABEL ID 4-679-141-51 LABEL ID (UCTO) 4-679-141-61 LABEL ID (UCTO)	537 4-680-580-01 BUSTERAID W-LAN 725 4-679-188-11 LABEL ID 4-679-392-31 LABEL ID 4-678-549-11 LABEL ID 4-678-552-41 LABEL ID 4-678-552-51 LABEL ID 4-678-552-61 LABEL ID 4-678-552-71 LABEL ID 4-678-552-71 LABEL ID 4-679-141-41 LABEL ID ● 4-679-141-51 LABEL ID (UCTO) 4-679-141-61 LABEL ID (UCTO)	537 4-680-580-01 BUSTERAID W-LAN 725 4-679-188-11 LABEL ID 4-679-392-31 LABEL ID 4-678-549-11 LABEL ID 4-678-552-41 LABEL ID 4-678-552-51 LABEL ID 4-678-552-61 LABEL ID 4-678-552-71 LABEL ID 4-679-141-41 LABEL ID ● 4-679-141-51 LABEL ID (UCTO) 4-679-141-61 LABEL ID (UCTO)

• This parts list contains two different types of parts.

The first type is the parts that are common to all models. The other type is the parts that are different depending on each model.


- The model that is accompanied by asterisk (*) is the CTO model.
- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。 ・機種名に (*) がつくのは CTO モデルです。

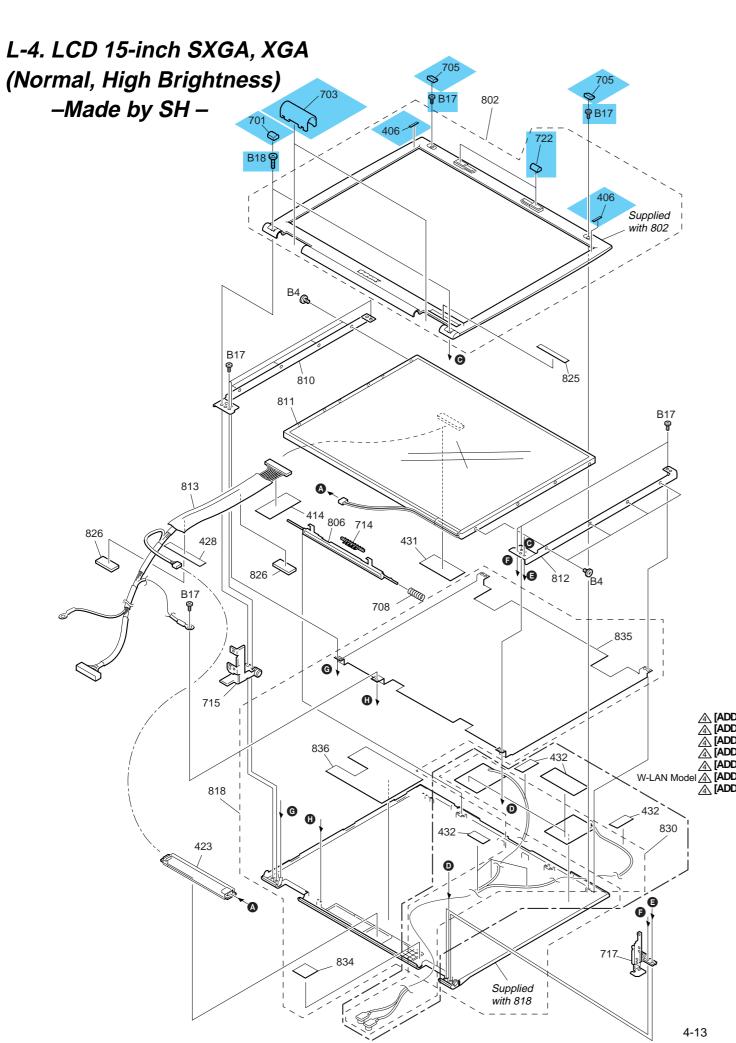

Ref.No.	Part No.		Description
406 414 418 423 428	4-677-679-01 4-673-316-01 1-476-316-31	-	CUSHION BEZEL FOIL LCD HARNESS GT2 CUSHION WL CABLE INVERTER UNIT COPPER TAPE LCD ED
701 703 705	4-667-073-11	&	CU-FOIL WITH MYLAR COVER SCREW LOWER COVER HINGE COVER SCREW UPPER SPRING (LATCH), COMPRESSION
714 715 717 722 802	4-673-808-01		LATCH BUTTON HINGE L HINGE R CUSHION LATCH ASSY HOUSING BEZEL 15(S)
* 812	4-670-669-11 4-671-115-01 4-671-114-02 A-8115-898-A 4-677-683-01		LATCH HONTAI BRACKET LCD 15 (L) BRACKET LCD 15 (R) ASSY HOUSING DISPLAY 15(S) DISPLAY GASKET
835 836	4-677-672-01 4-677-680-01		SHIELD DISPLAY FOIL HOUSING DISPLAY
	4-641-726-81 4-641-726-61 4-664-453-21	& &	SCREW (M2), SPECIAL HEAD SCREW (M2), SPECIAL HEAD SCREW (M2X7), SPECIAL HEAD

						J	AM		EU	
	Ref No	o. Part No.		Description	GRT5xE/P *	GRT5xE *	GRT250 *	GRT895MP	GRT815E	GRT815M
- 1	432			FILAMENT TAPE						
l	811	A-8115-790-A	\$ #	ASSY LCD 15XGA (SH)(S)					•	•
		A-8113-853-A	\$ #	ASSY LCD 15 (SH) GT2 (S)	•	•	•	•		
	813	9-885-031-28		15XGA N/B HARNESS	•	•	•	•		
		9-885-031-27		15XGA N/B/L HARNESS					•	•
	825	4-679-379-31		LABEL ID				•		
		4-679-379-41		LABEL ID					•	
		4-679-379-51		LABEL ID						•
DD]		4-678-552-41		LABEL ID	•					
DD]		4-678-552-51		LABEL ID		•				
DD]		4-678-552-61		LABEL ID	•					
DD]		4-678-552-71		LABEL ID		•				
DD]		4-679-141-41		LABEL ID (UCTO)			•			
DD]		4-679-141-51		LABEL ID (UCTO)			•			
DD]		4-679-141-61		LABEL ID (UCTO)			•			
	830	1-754-295-31		ANTENNA, FILM (L AND R)			•	•		

- This parts list contains two different types of parts.
 The first type is the parts that are common to all models.
 The other type is the parts that are different depending on each model.
- The model that is accompanied by asterisk (*) is the CTO model.
- ・この部品表は、機種共通の部品と、機種によって使い分けが必要な部品に分かれています。
- ・機種名に(*)がつくのはCTOモデルです。

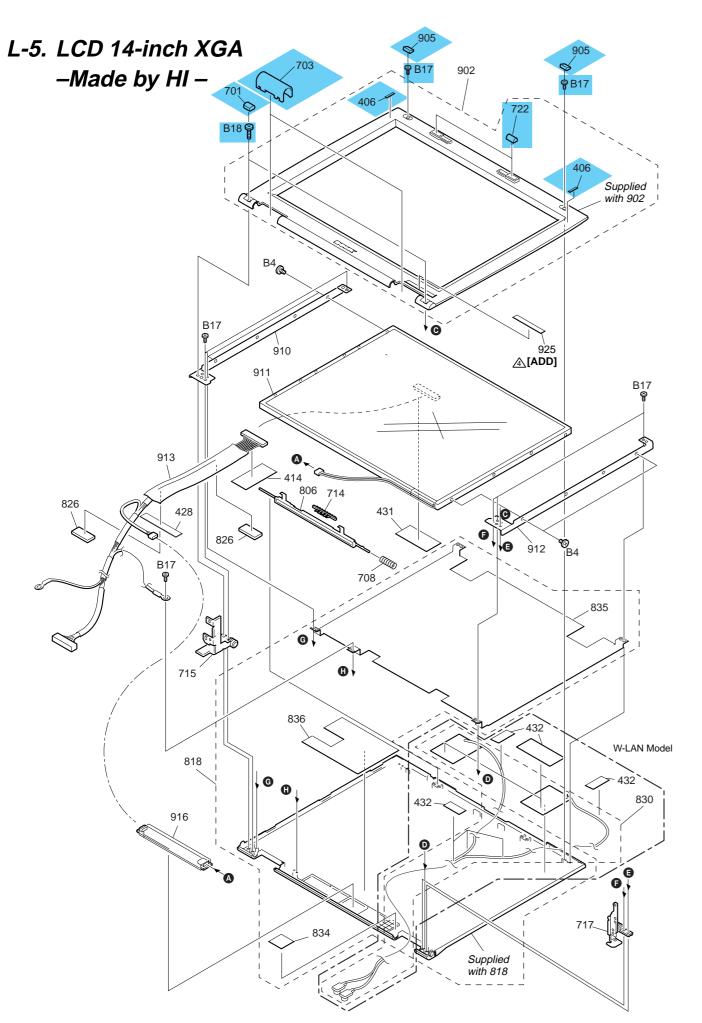


E	tef.No.	Part No.		Description
	406	4-672-201-11	&	CUSHION BEZEL
	414	4-677-679-01 4-673-316-01		FOIL LCD HARNESS
				GT2 CUSHION WL CABLE
		4-672-403-01		COPPER TAPE LCD ED
	431	4-680-130-01		CU-FOIL WITH MYLAR
	432			FILAMENT TAPE
		4-672-197-11		COVER SCREW LOWER
		4-667-073-11	&	COVER HINGE
		4-672-199-01		SPRING (LATCH), COMPRESSION
	714	4-670-668-11		LATCH BUTTON
	715	4-673-807-01		HINGE L
	717	4-673-808-01		HINGE R
	722	4-672-202-11	&	CUSHION LATCH
	806	4-670-669-11		LATCH HONTAI
	818	A-8115-898-A		ASSY HOUSING DISPLAY 15
	826	4-677-683-01		DISPLAY GASKET
		1-754-295-31		ANTENNA, FILM (L AND R)
	835	4-677-672-01		SHIELD DISPLAY
		4-677-680-01		FOIL HOUSING DISPLAY
	902	A-8115-901-A		ASSY HOUSING BEZEL 14
	002	7.0110.00171		
		4-672-203-11	&	COVER SCREW UPPER 14
*		4-671-117-01		BRACKET LCD 14 (L)
		A-8113-928-A	\$#	LCD UNIT(14.1XGA)(H)(S)
*		4-671-116-01		BRACKET LCD 14 (R)
	913	9-885-031-28		15XGA N/B HARNESS
	916	1-476-317-21		INVERTER UNIT
	925	4-679-141-71		LABEL ID (UCTO)◀ (ADD)
	B4	4-641-726-81		SCREW (M2), SPECIAL HEAD
		4-641-726-61	٥	SCREW (M2), SPECIAL HEAD
	B18	4-664-453-21	& &	
	סוס	4-004-403-21	α	SCINEW (WZAT), SPECIAL FIEAD

A-1. Accessory






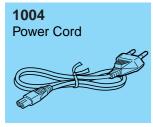








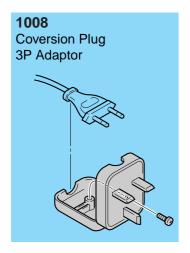










1013 RAY-Catcher Unit

<u>♠</u> [MA]	
FILTER CLAMP *1	


									J						AM							EU			
		Ref.No. Part No.			Description	GRT77E/P	GRT55E/B	GRT7xE/P *	GRT7xE *	GRT5xE/P *	GRT5xE *	GRT270 *	GRT250 *	GRT230 *	GRT270G	GRT260G	GRT240G	GRT35F	GRT896HP	GRT816M	GRT895MP	GRT815E	GRT815M	GRT896SP	GRT816S
		1001 1-478-037-32	\$		ADAPTOR, AC	+	\vdash	•		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	*14	1-478-037-32	\$	- &	-	٠.		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		-	<u> </u>
	AL						<u> </u>																\rightarrow	\rightarrow	
	-	1003 A-8067-763-A A-8112-427-A	\$ # S #		BP2NX SNT(J)ASSY(S) BP2NX SNT(U)ASSY(S)	•	•	•	•	•	•	•	•	•	•	•	•	_	_				-	\rightarrow	-
		1-756-269-42	\$ #		BATTERY PACK, LITHIUM ION		-					•	•	•	•	•	•	•	•	•	•	•	•	•	•
		1004 1-575-131-61	\$ #	. a	CORD. POWER	_	_						_					•	÷	÷	•	•		•	$\ddot{\cdot}$
	<u>A</u>	1004 1-575-151-61		- &	CORD, POWER	_	+							-				•	•	•	•	•		-	<u> </u>
		1-757-562-21			CORD, POWER	_	-					•	•	•	•	•	•	•					\rightarrow	\rightarrow	-
	Δ.	1006 1-790-732-32		- &	CORD, POWER	-	•	•	•	•	•	•	•	•	•	_	•						\rightarrow	\longrightarrow	
	255	1007 1-783-801-22		- &	CORD, CONNECTION	Ť	Ť	Ť	-	Ť	-		-						•	•	•	•	•	•	•
	\vdash	1007 1-763-601-22			ADAPTOR, CONVERSION PLUG 3P	_	_						_						÷	•	•	•		•	•
	-	1009 1-417-422-11		- &	CABLE, RF ATTENUATOR (TV)	•		•	•	•	•								•	•	-	•			<u> </u>
	\vdash	1010 4-673-694-01		- &	COMBO DUMMY	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	\vdash	1011 1-823-959-11		- &		1	•	H	-	-	-	-	-	-	•	•	•	-		_	-	_	$\overline{}$	\rightarrow	-
<u> </u>		1012 1-477-556-21			REMOTE COMMANDER (TV)	•	•	•	•	•	•												-	-	-
/2\ [, t]		1-477-900-11		- &	REMOTE COMMANDER	-									•	•	•						-	-	-
		1013 1-477-218-41		&	RAY-CATCHER UNIT (TV)	•	•	•	•	•	•				•	•	•						-		-
	*1	1014 1-400-636-11		&	FILTER, CLAMP (FERRITE CORE)	_									•	•	•						$\overline{}$	-	-
	-	1-400-255-21		- &	FERRITE CORE	_	_					•	•						•		•		-	•	-
		4-679-420-01		- &	GETTING STARTED BOOKLET														•	•	•	•	•	•	•
		4-679-074-01		&	Instruction Manual (XP)	•	•	•	•	•	•												\neg		\neg
		4-679-028-01		&	QUICK START										•	•	•						-	-	\neg
		4-679-038-01		&	QUICK START							•	•	•											
	\vdash	4-679-144-01		&	QUICK START													•					\neg		
L	-	4-679-143-01		&	SPEC SHEET													•					\Box		\neg
																<u> </u>	<u> </u>	<u>/2</u> \						<u></u>	_
						<u> </u>	4								2									2	<u> </u>
						⋖									⋖	⋖	⋖	⋖						⋖	⋖`
						[MA]									[MA]	[MA]	[MA]	[MA]						[MA]	[MA]
						_									_	_	_	_						_	_

- *1 For the AC adaptor shown by the reference No. 1001 of the GRT270G, GRT260G and GRT240G, be sure to install the FILTER CLAMP shown by reference No. 1014.
- *1 GRT270G,GRT260G,GRT240Gのref.1001 AC アダプターには,ref.1014 FILTER CLAMP を必ず取りつけてください。
 - Clamp position
 - ・FILTER CLAMPの取り付け位置




DIP Switch

The DIP switch setting is following table.
DIP スイッチの設定は下の表をご参照ください

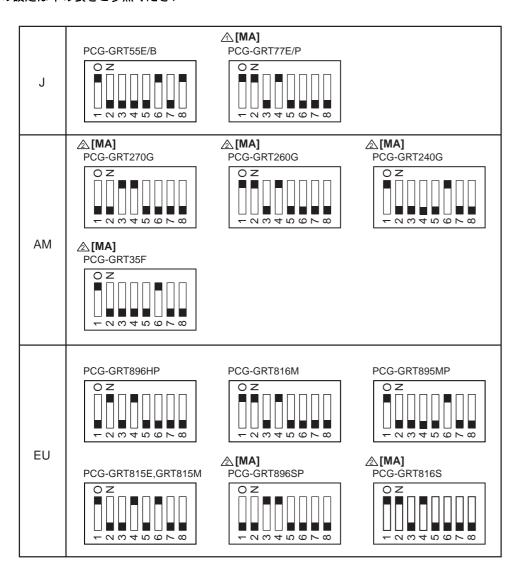


[FOR CTO MODEL]

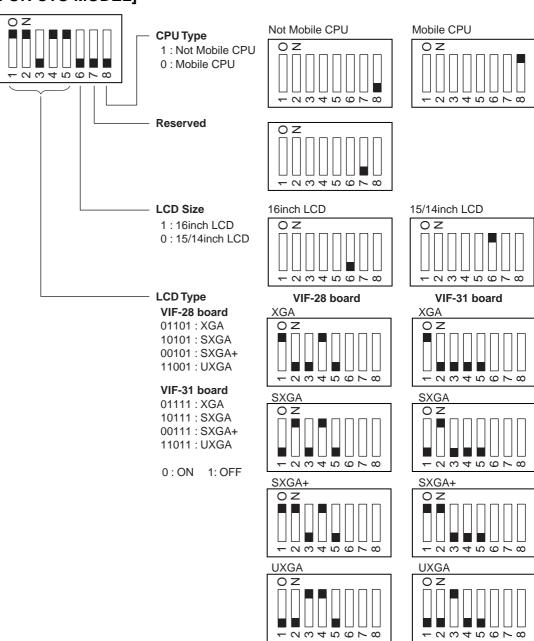

The DIP switch setting is different depending the types of LCD, CPU and VIF board. Set the DIP switch of the CTO model in accordance with the above table. For the method of identifying the types of the VIF board, see the illustration shown below.

DIP スイッチの設定は、LCD や CPU、VIF 基板の種類により異なります。 CTO モデルは、上の表に従って DIP スイッチを設定してください。 VIF 基板の見分け方については、下記の図をご覧ください。

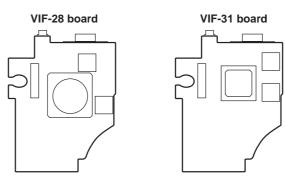

CHAPTER 5. OTHERS


5-1. バーコードラベルについて

バーコードラベルの見方


バーコードラベルの網掛け部は、修理データとして使用いたします。

5-1. The barcode label


The hatched portion of the barcode label is used as the repair data.

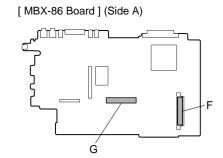


[HDD] (Made by I) (Top)

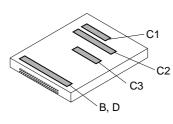


[DVD+-RW Drive] (Made by So) (Top)

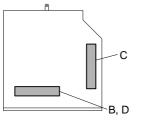


[HDD] (Made by Hi) (Top)




[DVD-RW Drive] (Made by Pi) (Top)




[MBX-86 Board] (Side B)




[HDD] (Made by Fu) (Top)




[Combination Drive] (Made by So) (Top)

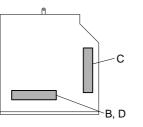


[Modem Card]




[LCD Unit (16-inch UXGA Clear Black) (HI)] (Rear)

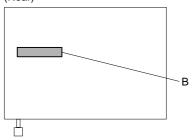


[LCD Unit (16-inch SXGA Clear Black) (HI)] (Rear)

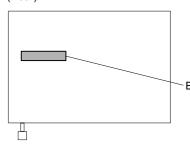


[LCD Unit (16-inch SXGA) (SH)] (Rear)

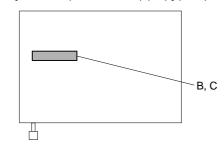


[LCD Unit (15-inch XGA) (SH)] (Rear)

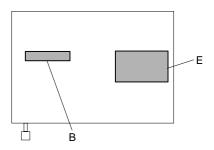


[LCD Unit (15-inch SXGA) (SH)] (Rear)

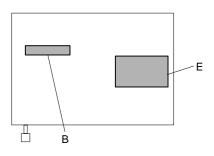

[LCD Unit (15-inch XGA Clear Black) (HI)]

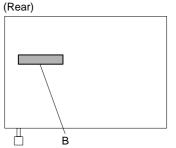

[LCD Unit (14-inch XGA) (HI)] (Rear)

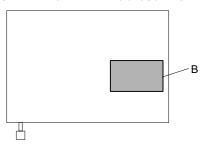

A : Parts No.
B : Serial No.
C : Revision No.
D : Product code
E : Maker Barcode
F : Global User ID (iLink)


G : Mac Address

: Barcode

5-2. Replacing the CPU


1. Removing the CPU

- ① Insert a flat-blade screwdriver into the notch as shown in the illustration and rotate it so that the protrusion comes to the lock release position.
- 2 Pull the CPU gently upward to lift it out of the CPU socket.

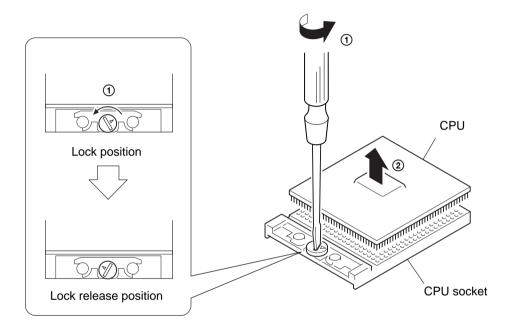

2. Installing the CPU

- ① Align the triangle reference mark of the CPU with that of the CPU socket and insert all the pins of the CPU to the corresponding holes of the CPU socket.
- 2 Insert a flat-blade screwdriver into the notch as shown in the illustration and rotate it so that the protrusion comes to the lock position.

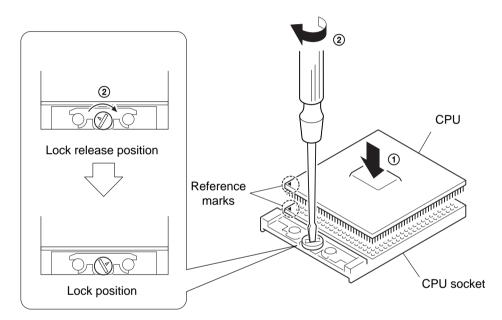

NOTE:

Rotate a flat-blade screwdriver to the lock position securely. If not, the operation of the CPU may become unstable.


5-3. CTO Information

1. PCG-GRT7xE

Model name: PCG-GRT7xE/P (Japanese Area)

Model number :

OS : WindowsXP Pro Ver.1.0

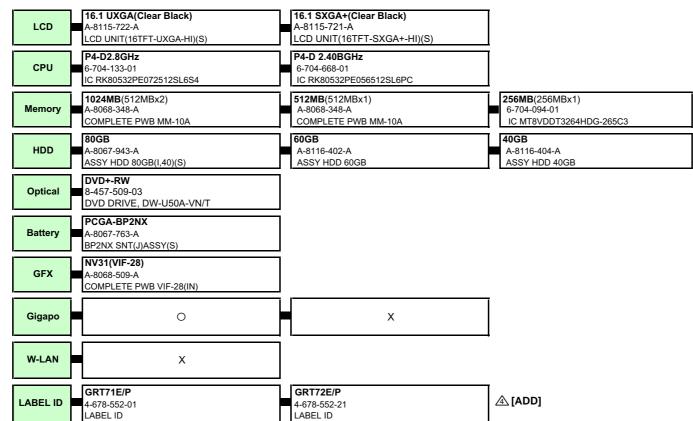


Model name: PCG-GRT7xE (Japanese Area)

Model number:

OS: WindowsXP Home

Ver.1.0

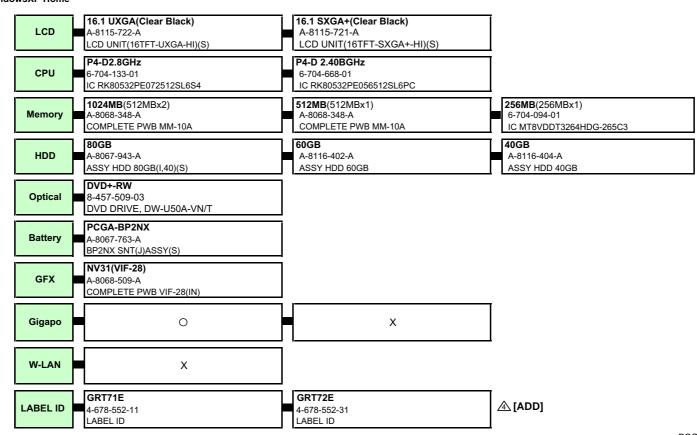


2. PCG-GRT5xE

Model name: PCG-GRT5xE/P (Japanese Area)

Model number:

OS : WindowsXP Pro Ver.1.0

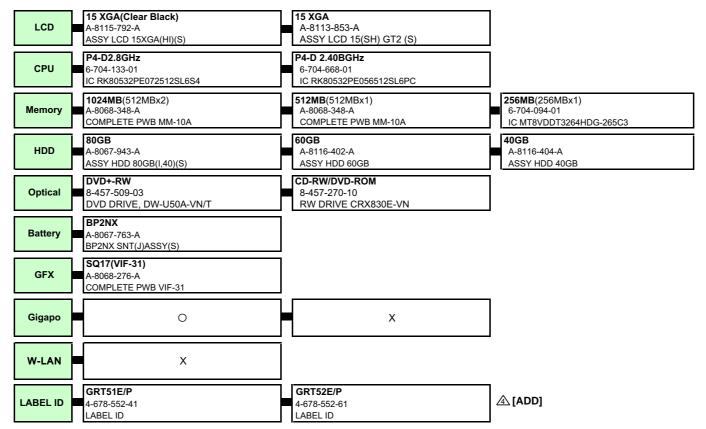


Model name: PCG-GRT5xE (Japanese Area)

Model number:

OS: WindowsXP Home

Ver.1.0

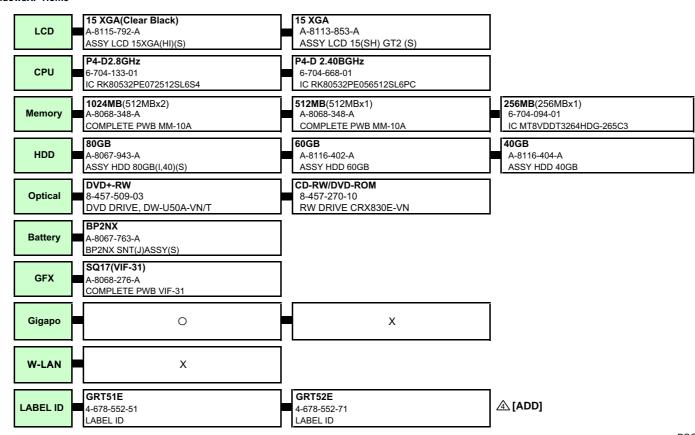

3. PCG-GRT270

Gigapo

GRT270K 4-679-141-31


⚠ [ADD]

Model name: PCG-GRT270P Model number : OS : WindowsXP Pro Ver.1.0 A-8115-722-A LCD UNIT(16TFT-UXGA-HI)(S) LCD P4-M2.6GHz 6-705-187-01 IC RH80532GC064512SL6W2 P4-M2.4GHz 6-704-615-01 IC RH80532GC056512SL6V P4-M2.2GHz 6-704-614-01 IC RH80532GC049512SL6VB M-CEL 2.0GHz 6-704-652-01 IC RH80532NC041256SL61 P4-2.8GHz 6-704-133-01 IC RK80532PE072512SL6S4 P4-2.66 GHz 6-704-666-01 IC RK80532PE067512SL6PI P4 2.4BGHz 6-704-668-01 IC RK80532PE056512SL6PC Memory 1024MB(512MBx2) A-8068-348-A COMPLETE PWB MM-10A **512MB**(512MBx1) A-8068-348-A **256MB**(256MBx1) 6-704-094-01 6-704-094-01 IC MT8VDDT3264HDG-265C3 A-80bo-3-707. COMPLETE PWB MM-10A 40GB A-8116-404-A 80GB A-8067-943-A ASSY HDD 80GB(I,4 **60GB** A-8116-402-A ASSY HDD 60GB ASSY HDD 40GB Optical DVD+-RW 8-457-509-03 DVD DRIVE, DW-U50A-VN/T CD-RW/DVD-ROM 8-457-270-10 RW DRIVE CRX830E-VN PCGA-BP2NX
A-8112-427-A
BP2NX SNT(U)ASSY(S NV31(VIF-28) A-8068-509-A COMPLETE PWB VIE-28 W-LAN 0 X Gigapo | Х GRT270P 4-679-141-11 LABEL ID (UCTO ⚠ [ADD] Model name: PCG-GRT270 Model number: A-8115-722-A LCD UNIT(16TFT-UXGA-HI)(S) P4-M2.6GHz
6-705-187-01
IC RH80532GC064512SL6WZ P4-M2.4GHz 6-704-615-01 IC RH80532GC0 P4-M2.2GHz 6-704-614-01 IC RH80532GC049512SL6VB P4-2.8GHz 6-704-133-01 IC RK80532PE072512SL6S4 P4 2.4BGHz 6-704-668-01 IC RK80532PE056512SL6PC M-CEL 2.0GHz P4-2.66 GHz 6-704-652-01 IC RH80532NC041256SL6VJ Memory | 1024MB(512MBx2) A-8068-348-A COMPLETE PWB MM-10A 256MB(256MBx1) 6-704-094-01 **512MB**(512MBx1) A-8068-348-A A-8068-348-A COMPLETE PWB MM-10 IC MT8VDDT3264HDG-265C3 40GB A-8116-404-A ASSY HDD 40GE 80GB A-8067-943-A ASSY HDD 80GB(60GB A-8116-402-A ASSY HDD 60G Optical DVD+-RW 8-457-509-03 DVD DRIVE, DW-U50A-VN/T CD-RW/DVD-ROM 8-457-270-10 RW DRIVE CRX830E-VN Battery PCGA-BP2NX
A-8112-427-A
BP2NX SNT(U)ASSY NV31(VIF-28) A-8068-509-A W-LAN 0 Gigapo Х GRT270 4-679-141-21 LABEL ID (UC ⚠ [ADD] Model name : PCG-GRT270K Model number : OS: Windows 2000 Ver.1.0 16.1 UXGA(Clear Black) 16.1 UXGA(GIBBI E.III...),
A-8115-722-A
LCD UNIT(16TFT-UXGA-HI)(P4-M2.4GHz 6-704-615-01 IC RH80532GC056512SL6V(P4-2.8GHz 6-704-133-01 IC RK80532PE072512SL6S4 P4-M2.6GHz 6-705-187-01 IC RH80532GC064512SL6W P4-M2.2GHz M-CEL 2.0GHz P4-2.66 GHz P4 2.4BGHz 6-704-614-01 IC RH80532GC049512SL6VB **512MB**(512MBx1) A-8068-348-A COMPLETE PWB MM 1024MB(512MBx2) A-8068-348-A Memory A-8068-348-A COMPLETE PWB MM-10 IC MT8VDDT3264HDG-2650 80GB A-8067-943-A ASSY HDD 80GB(I,40)(S **60GB** A-8116-402-A **40GB** A-8116-404-A ASSY HDD 60GB | DVD+-RW | 8-457-509-03 | DVD DRIVE, DW-U50A-VN/T CD-RW/DVD-ROM 8-457-270-10 RW DRIVE CRX830E-VN PCGA-BP2NX A-8112-427-A BP2NX SNT(U)A GFX NV31(VIF-28)
A-8068-509-A
COMPLETE PWB VIF-28 W-LAN

4. PCG-GRT250


Model name : PCG-GRT250P

Model number : OS : WindowsXP Pro Ver.1.0

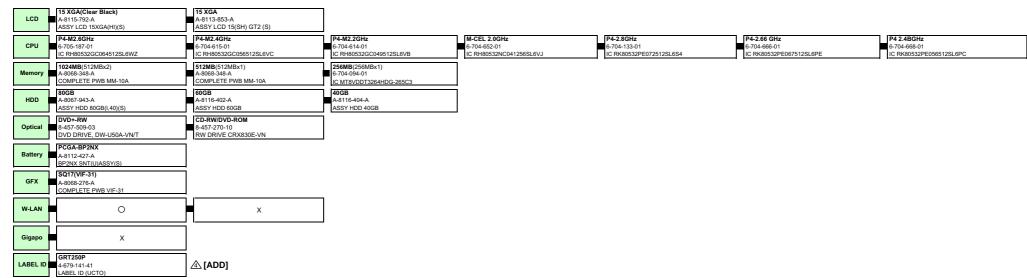


Model name : PCG-GRT250

Model number :

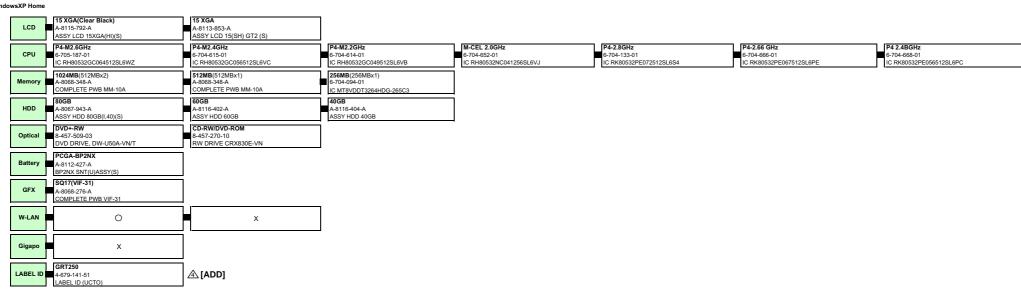


Model name : PCG-GRT250K

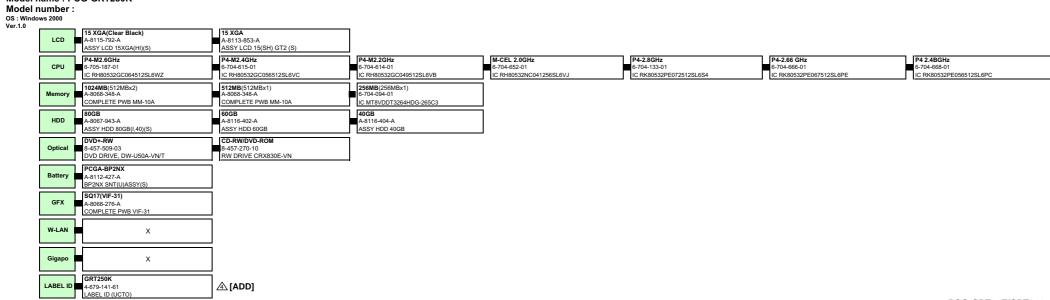

5. PCG-GRT230

Model name: PCG-GRT230

Model number : OS : WindowsXP Home Ver.1.0

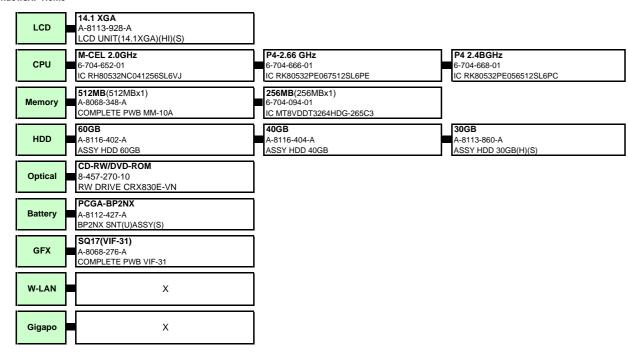



List of PCG-GRT Series (As of June, 2005)

Service Manual		Model	Name	
Part No.	J	АМ	EU	AO
	PCG-GRT55/B	PCG-GRT25F	PCG-GRT715E	PCG-GRT25
	PCG-GRT77/B	PCG-GRT150	PCG-GRT715M	PCG-GRT25CP
	PCG-GRT99/P	PCG-GRT160	PCG-GRT716S	PCG-GRT25L
		PCG-GRT170	PCG-GRT785B	PCG-GRT30CP
9-876-309-XX			PCG-GRT785E	PCG-GRT30LP
			PCG-GRT786M	PCG-GRT30P
			PCG-GRT795MP	
			PCG-GRT796MP	
			PCG-GRT796SP	
	PCG-GRT55E/B	PCG-GRT35F	PCG-GRT815E	
	PCG-GRT5xE*	PCG-GRT230G*	PCG-GRT815M	
	PCG-GRT55E/P*	PCG-GRT240G	PCG-GRT816M	
9-876-352-XX	PCG-GRT77E/P	PCG-GRT250G*	PCG-GRT816S	
	PCG-GRT7xE*	PCG-GRT260G	PCG-GRT895MP	
⚠ [COR]	PCG-GRT7xE/P*	PCG-GRT270G*	PCG-GRT896HP	
9-876-343-XX		PCG-GRT270G	PCG-GRT896SP	

*: CTO Model

This manual and the constituent data may not be replicated, copied nor reprinted in whole or in part without prior written authorization of Sony Corporation.

本マニュアルの一部, または全部について, 無断で データの複製, 複写, 転載することを禁じます。

Revision History

Suffix	Ver.	Date		Contents	QM No.
-01	Ver. 1	2003.09.16	First Edition		
-02	Ver. 2	2003.10.06	A	Front Page (Model Line Up), Page 1-1, Page 4-1 - 4-3, Page 4-5, Page 4-7 - 4-9,	N2003_072AK
				Page 4-11, Page 4-15, Page 4-16, Back Cover	
-03	Ver. 3	2003.10.27	2	Front Page (Model Line Up), page 1-1, Page 4-1 - 4-9, page 4-11 - 4-12, Page 4-15 - 4-16,	N2003_085AK
				Back Cover	
-04	Ver. 4	2003.11.19	3	Front Page, Page 3, page 4-1, Page 4-3 - 4-4, Page 4-6, Page 4-7, Page 4-9, Back Cover	N2003_091CK
-05	Ver. 5	2005.02.07	4	Page 4-3, Page 4-7, Page 4-11, Page 4-14, Page 5-3 - 5-6	N2004_153CK
-06	Ver. 6	2005.06.09	Æ	Page 4-7	N2005_025CK
_					
<rem< td=""><td>arks></td><td></td><td></td><td></td><td></td></rem<>	arks>				